

HP 9000 Computers
Installing and Administering
Network Services



**HEWLETT
PACKARD**

Customer Order Number: B1012-90010
Printed in England, February 1991

Notice

Hewlett-Packard makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Hewlett-Packard assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Hewlett-Packard.

© Copyright 1991, Hewlett-Packard Company.

This document contains proprietary information, which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without the prior written consent of Hewlett-Packard Company. The information contained in this document is subject to change without notice.

Restricted Rights Legend

Use, duplication, or disclosure by the Government is subject to restrictions as set forth in paragraph (b)(3)(B) of the Rights in Technical Data and Software clause in DAR 7-104.9(a).

© Copyright 1980, 1984, 1986, AT&T, Inc.

© Copyright 1979, 1980, 1983, 1985-1990, The Regents of the University of California.

© Copyright, 1979, 1986, 1987, 1988 Sun Microsystems, Inc.

This software and documentation is based in part on the Fourth Berkeley Software Distribution under license from the Regents of the University of California.

UNIX® is a U.S. registered trademark of AT&T in the U.S.A. and other countries.

NFS is a trademark of Sun Microsystems, Inc.

NOTICE TO USERS

The Network Information Service (NIS) was formerly known as Yellow Pages (YP). The functionality of the two remains the same, only the name has changed. The name Yellow Pages is a registered trademark in the United Kingdom of British Telecommunications plc.

*Hewlett-Packard Company
19420 Homestead Road
Cupertino, CA 95014 U.S.A.*

Printing History

First Edition

February 1991

Conventions

The table below explains the conventions used in this manual.

Conventions	
Notation	Description
Boldface	Boldface type is used when a term is defined.
Computer Text	Computer type is used for commands and keyboard entries that you must type exactly as shown. It is also used for on-screen prompts and messages.
<i>italics</i>	Italic type is used for emphasis and for titles of manuals and publications. Italic type is also used to represent a variable, such as <i>nodename</i> .
Key	This font is used to indicate a key on the computer's keyboard. When two or more keys appear together with dashes separating them, such as Ctrl-D , press those keys simultaneously to execute the command.
Softkey	This font is used to represent function softkeys that appear at the bottom of your screen.
<u>Underlining</u>	Underlining is used to emphasize a user entry. It distinguishes what you type, such as a command, from other data on the command line, such as the command prompt, a computer response, or a variable. For example: \$ <u>ds</u> copy filename1 filename2
[]	An element inside brackets in a syntax statement is optional. Several elements stacked inside brackets means you may select any one or none of these elements.

Conventions	
Notation	Description
{ }	<p>When several elements are stacked within braces in a syntax statement, the user must select one of those elements. For example:</p> <p>{A} {B} {C} You must select A, B, or C option.</p>
...	<p>A horizontal ellipsis in a syntax statement indicates that a previous element may be repeated. For example:</p> <p><i>[option][option]...</i></p> <p>In addition, vertical and horizontal ellipses may be used in examples to indicate that portions of the example have been omitted.</p>

Table of Contents

Chapter 1 Product Overview

Software Components	1-2
Node Names	1-3

Chapter 2 Installing NS

Installation Steps	2-2
1. Updating Your Network Map	2-3
2. Installing the NS Software	2-4
Using update	2-4
Files Created During Software Installation	2-5
3. Configuring the NS Software	2-6
Modifying Your System's NS Node Name Using SAM	2-6
Tips for Using SAM	2-6
Procedure for Using SAM to Modify the NS Node Name	2-7
Creating the Probe Proxy Table	2-8
Proxy Command Description	2-8
How Probe Proxy Servers Work with NS	2-9
Setting Up NS Gateway Access	2-11
Syntax for Probe Proxy Command	2-11
Options for Probe Proxy Command	2-11
4. Checking the NS Installation	2-15
Syntax for NS Verification	2-15
Options for NS Verification	2-15
Manually Testing the Installation	2-16

Chapter 3 Maintaining NS

Setting Up Security for NS	3-2
Local and Remote Logins	3-2
Access Rights	3-2
Disabled Services	3-3

Using SAM to Disable NFT	3-4
Tips for Using SAM.	3-4
Disabling NFT with SAM.	3-4
Verifying the Service is Disabled	3-5
Modifying the Probe Proxy Table	3-6
Reference: Networking Daemons and Special Files	3-7
Daemons	3-7
Configuration Files	3-8
 Chapter 4 Troubleshooting Network Services	
Chapter Overview	4-2
Characterizing the Problem	4-3
Diagnostic Tools Summary	4-5
Diagnosing Interactive Problems	4-7
Diagnosing Gateway and Repeater Problems	4-8
Flowchart Format	4-9
Troubleshooting Network Services	4-10
Flowchart 1. NS Troubleshooting	4-11
Contacting Your HP Support Representative	4-13
 Chapter 5 Installing and Configuring VT3K	
Installing VT3K	5-2
Configuring VT3K	5-3
Troubleshooting VT3K	5-4
 Appendix A Error Messages	
 Appendix B Moving from RFA to NFS	
Why Move to NFS Services?	B-1
Similarities	B-2
Differences	B-2
Changing Scripts from RFA to NFS	B-3
Shell Scripts that Accept Different Paths	B-3
Shell Scripts with Hard-Coded Paths	B-4
Change Pathnames	B-4
Create New Pathnames	B-5

Index

Product Overview

HP 9000 Network Services (NS) enable Hewlett-Packard (HP) and non-HP computers to communicate using HP-defined user-level services over a Local Area Network connection.

The link product must be installed for NS to function. The link product provides all the necessary hardware and software to interface between HP 9000 computers and an IEEE 802.3 or Ethernet Local Area Network.

ARPA Services and NFS Services also require link software. ARPA Services, NFS Services, and NS can run concurrently on the same node, but this is not required.

Note

For a detailed overview of the AdvanceNet products available for HP 9000 computers, refer to the *Networking Overview*.

Software Components

The NS product has only software components. When you purchase the NS product, you receive a tape that contains all of the NS software. The NS software includes the NS user services **Network File Transfer (NFT)** and **Virtual Terminal for the HP 3000 (VT3K)**. The following descriptions of the NS user services serve as an overview only. For more information on these services, refer to *Using Network Services*.

- **Network File Transfer (NFT)** enables you to copy files between nodes in the network. NFT can be used between HP 9000 systems and other systems. Refer to *Networking Overview* and to *NS Cross-System NFT Reference* for details on cross-system NFT.
- **VT3K** is an application that allows you to log into a remote MPE (HP 3000) host from a local HP-UX host. VT3K uses NetIPC and works with either MPE V or MPE XL.

Note

Remote File Access (RFA) is no longer included with the Network Services product. In order to maintain distributed file access, you *must* use NFS Services. For more information, see Appendix B.

Node Names

Each computer system or node in an NS network has a name. You must specify **node** names when using the *User Services*. Node names at NS nodes have the following syntax:

node [.domain [.organization]]

Domain and *organization* names may be useful for grouping nodes and collections of nodes, but they currently have no special meaning regarding the structure of the network within the NS product. When all three parts of the node name are specified, it is called a *fully-qualified node name*.

Each node, domain, and organization name is a maximum of 16 characters long. The maximum total length of a fully-qualified node name is 50 characters. All alphanumeric characters are allowed, including the underscore () and dash (-) characters, but the first character of each parameter must be alphabetic. Upper and lower case characters are not considered distinct. For example: ANIMAL.DCL.IND would indicate node ANIMAL in the DCL lab (domain) of the IND division (organization).

Note

Nodename and *hostname* may have the same name but are used by different services. For Network Services, the *nodename* must be configured properly and the *hostname* is ignored. The ARPA Services product uses the *hostname*.

1890

...

...

...

...

...

Installing NS

This chapter describes how to install the NS networking product on your system.

Note

For those customers who have previously installed NS: Refer to the installation instructions provided in the “Read Me First” document when updating your system to a new revision of the NS software.

The link product must be installed before installing NS. For information on link installation, refer to the link installation manual.

Installation Steps

To install the NS product, you must perform the following steps in order:

1. Update your network map.
2. Install the NS software.
3. Configure the NS software.
4. Check the NS software installation.

Each of these steps is described in detail in this chapter.

1. Updating Your Network Map

Before you install the NS product, it is important to take the time to update your network map to indicate that NS is installed on your node. A network map provides you with information about the configuration of computers on your network. As a node manager, it is your responsibility to keep the network map up to date when you add or delete computers or make cable changes.

Refer to the link installation manual for detailed information about creating and maintaining a network map.

2. Installing the NS Software

Before you begin the following installation procedure, make sure you have the correct software versions on your computer. The HP-UX operating system, the required link software and the NS software must all be the same version. Otherwise, the network may malfunction. Use the `uname -a` command to check your HP-UX operating system version number.

You install the NS software using the HP-UX update program.

Using update

The update program is fully documented in the HP-UX installation manual. You should read this manual before attempting to install the NS software using update.

After you are certain that the required HP-UX and link software is installed, use the update program to install the NS software.

Files Created During Software Installation

When the NS software is installed, two symbolic links, one daemon, one server, two binaries, and one message catalog are created.

Table 2-1. Files Created During Software Installation	
Files	Function
/etc/nftdaemon	Symbolic link to /usr/bin/nftdaemon
/etc/nftserver	Symbolic link to /usr/bin/nftserver
/usr/bin/nftdaemon	The Network File Transfer (NFT) daemon process. This daemon must be running to use inbound or outbound NFT.
/usr/bin/nftserver	NFT server process.
/usr/bin/dscopy	NFT initiator process.
/usr/bin/vt3k	VT3K binary.
/usr/lib/nls/C/ns.cat	NS error message catalog.

The NS initialization script `/etc/netnssrc` automatically starts the NS daemons when the system reboots. This script is invoked from the LAN initialization script `/etc/netlinkrc`. No changes need to be made to `/etc/netnssrc`.

3. Configuring the NS Software

There are no configuration files that are unique to the NS product. NS uses configuration files that are provided with the link software or created during network configuration. No further editing of these files is necessary.

When you have successfully installed the NS software:

- You *can* modify your system's NS node name.
- If you plan to use the NS software through a gateway, you *must* create the *probe proxy table*.

Modifying Your System's NS Node Name Using SAM

SAM stands for **System Administration Manager**, a menu-driven utility for performing system administration tasks, including configuration of networking software. When you use SAM to modify this system's NS node name, you are replacing the `/bin/nodename` command in the `/etc/netlinkrc` file. The `/etc/netlinkrc` file is installed during the link product installation.

Tips for Using SAM

Remember the following tips when you use SAM. You can also get more information from the main menu item, *How to Use SAM*.

- Use your keyboard's cursor control and editing keys to navigate and edit forms.
- You can select a menu item in *either one* of the following methods:
 - Move the cursor to the menu item using `[Tab]`, the space bar, or the arrow keys and press `[Return]` or `Select Item`.
 - Type enough of the menu item's first word to uniquely identify it. In some cases, this is simply the first letter of the menu item. This method does not work for menu items that start with the same word.
- Access the on-line help screens whenever you need more information, such as how or where to obtain a required configuration value. Note that the **RESULT** sections of the on-line help screens explain what SAM will do "behind the scenes," such as what files SAM will create or modify, or what commands SAM will

execute automatically.

Procedure for Using SAM to Modify the NS Node Name

The following steps take you to either the LAN or X.25 Hardware and Software configuration menu where you can use SAM to modify your system's NS node name.

1. At the HP-UX prompt, type:

sam

Wait for SAM's main menu to appear.

2. Select the Networks/Communications menu item.
3. Select the type of network you wish to configure (either LAN Hardware and Software (Cards and Services) or X.25 Hardware and Software (Cards and Services)).
4. Select the View/Modify This System's NS Node Name menu item.
5. Fill in the form according to its instructions. View the Help screens for information about filling in the form.
6. Press **Perform Task**.
7. Press **Main Menu**.
8. Press **Exit SAM** to exit from SAM.

Creating the Probe Proxy Table

Note Perform this step only if you plan to use the NS product through a gateway.

The Probe proxy server enables NS to operate through a LAN-to-LAN gateway or across an X.25 network. NS uses the Probe protocol for name-to-IP-address resolution. By itself, the Probe protocol can only obtain information about nodes on the same network or subnetwork. If you need information on another network or subnetwork, the probe proxy server contains IP addressing information about other nodes on other networks. If another node on the LAN or X.25 network needs to establish a connection with a remote node that exists on a different network or subnetwork or an X.25 network (it does not matter if it is different or the same), the probe proxy server can provide the sending node with addressing information about the remote node. The sending node then uses this addressing information with its routing table to determine the correct route to a node on a remote network.

You must specify one node on the LAN and/or X.25 network as the probe proxy server. The probe proxy server can be a gateway, or any other node on the network.

Proxy Command Description

The probe proxy table is the NS equivalent of the ARPA Services `/etc/hosts` file. The probe proxy table associates IP addresses with NS node names; the `/etc/hosts` file associates IP addresses with mnemonic host names.

Like the `/etc/hosts` file, the probe proxy server does not provide all the addressing information needed to route data to a node on a remote network. When a requesting node receives addressing information from a probe proxy server, the requesting node must consult its network routing table to determine the correct route to the node on the remote network.

For more information about the network routing table, refer to *routing(7)* in the *HP-UX Reference* and the link installation manual. For more information about the `/etc/hosts` file, refer to *hosts(4)* in *HP-UX Reference* and the link installation manual.

2-8 Installing NS

How Probe Proxy Servers Work with NS

Figure 2-1 illustrates how probe proxy servers work with Network Services.

- You can initiate a connection from a node on Network A to another node on Network A without a proxy server (see Example 1).
- You can initiate a connection from a node on Network B to another node on Network B, even through a bridge, without a proxy server (see Example 2).
- You must have a proxy server on Network A to initiate a connection from a node on Network A to a node on Network B (see Example 3).
- You must have a proxy server on Network B to establish a connection from a node on Network B to a node on Network A that was initiated by a Network A node, even though Network A has a proxy server (see Example 4).

If you put the proxy server on the gateway, it will serve both Network A and Network B.

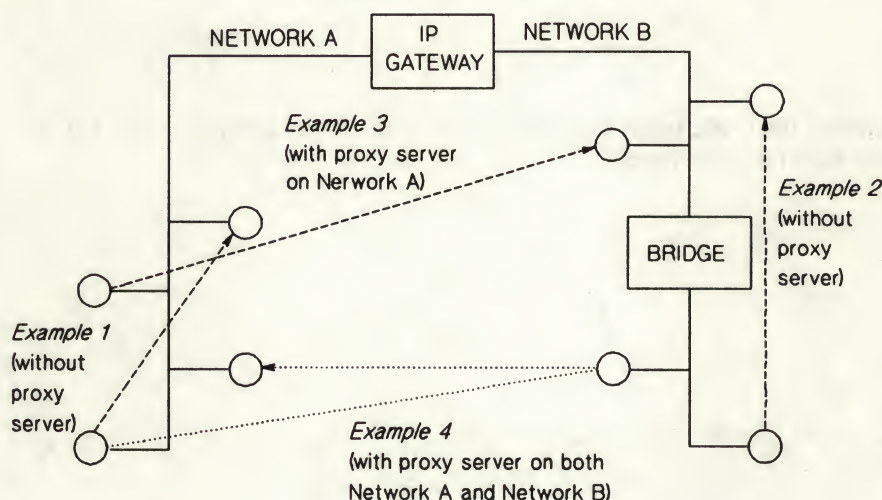 


Figure 2-1. How Probe Proxy Servers work with NS

A probe proxy server stores information about other nodes on other networks or subnetworks in a probe proxy table.

Figure 2-2 illustrates that for X.25, each node initiating the NS connection must be a proxy server and must have a proxy table entry for the remote interface. The IP-to-X.121 address mapping entries must be present on the local and remote nodes.

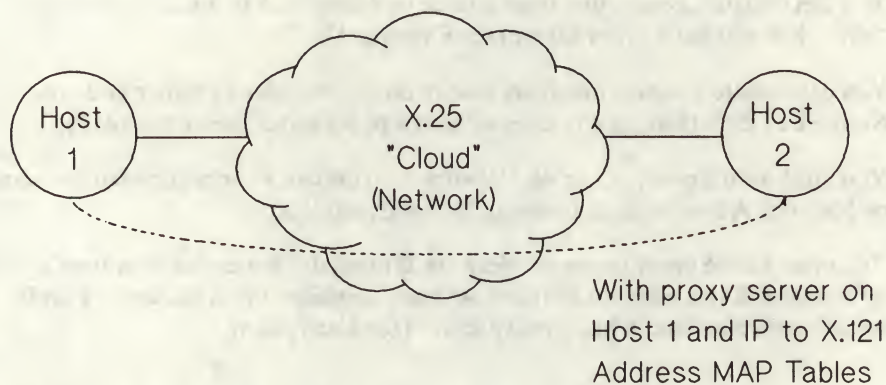 


Figure 2-2. An X.25 Example

You manipulate the probe proxy table with the `proxy` command (see `proxy(1M)` in the *HP-UX Reference*) described next.

Setting Up NS Gateway Access

You can access the NS gateway using the proxy command. This command manipulates the NS Probe proxy table.

Note You need to do this step each time you reboot the proxy server.

Syntax for Probe Proxy Command

```
proxy { add      nodename domain ip_address medium }
      { append   nodename domain ip_address medium }
```

or

```
proxy { on        }
      { off       }
      { delete    nodename }
      { show      nodename }
      { flush     }
      { list      }
```

Options for Probe Proxy Command

on Enables Probe proxy on a node. You must use this option before being able to change the probe proxy table. Requires superuser capability.

off Disables the proxy server. The probe proxy table is not flushed. Requires superuser capability.

add Adds a new entry to the probe proxy table. Requires superuser capability. The following parameters are required:

<i>nodename</i>	Fully-qualified NS node name. Domain and organization are required. Node
-----------------	--

names are assigned during link software initialization. Refer to the link installation manual for more information about node names.

domain

The internet domain. The only supported domain is HPDSN. (This is a different domain than the Network Information Service (NIS) domain included with the NFS Services product.)

ip_address

IP address of the remote node being mapped by *nodename*. The IP address must be in decimal internet "dot" format. See *inet(3N)* in the *HP-UX Reference* for a description of internet "dot" format, or refer to the link installation manual.

medium

The physical link transmission protocol. Can be either *ieee*, *ether* or *X.25*.

append

Appends an additional path report to an existing probe proxy table entry. Use this option if a remote node runs on a network that supports both IEEE 802.3 and Ethernet link mediums. "Add" to the probe proxy table a node running on the *ieee* medium, then "append" the same node to the probe proxy table as a node running on the *ether* medium. You can also use the *append* option if a node on a remote network or subnetwork contains more than one network interface accessible by your local node. *Append* requires the same options as *add* above. You must have superuser capability to use this option.

delete nodename

Deletes *nodename* from the probe proxy table and all the path reports associated with *nodename*. *Nodename* is a fully-qualified NS node name. You must have superuser capability to use this option.

flush	Clears the probe proxy table, deleting all entries. You must have superuser capability to use this option.
show <i>nodename</i>	Sends path report information for <i>nodename</i> to standard output. For each path report associated with <i>nodename</i> , the following information is returned: Node name, IP address, medium, services, and transports. The <i>services</i> and <i>transports</i> fields always contain the value FFFF, meaning all services and transports default to <i>on</i> .
list	Returns information for all entries in the probe proxy table. proxy list is equivalent to issuing a proxy show command for all node names in the probe proxy table.

Adding Proxy Table Entries with SAM:

1. At HP-UX prompt, type SAM
2. Select Network/Communications menu item
3. Select X.25 Hardware and Software

If the X.25 subsystem has been installed and IP addresses assigned to the interfaces, select NS (Network Services) Configuration.

Note Refer to *Installing and Administering X.25/9000* for information on assigning IP addresses.

4. Select Enable Probe Proxy Routing to Remote Systems
5. Fill in the information according to the instructions
6. Press **Perform Task**
7. Press **Previous Menu**
8. Press **Exit SAM**

All the information you have input is saved in the correct proxy command format in
/etc/netlinkrc

4. Checking the NS Installation

When you have installed, configured and initialized the NS software, make sure that NS is operating correctly on your node by running the NS verification script. The syntax for the NS verification script is as follows:

Syntax for NS Verification

```
/usr/nettest/nsverify/ver_ns [-r nodename login[:[password]]]
```

Options for NS Verification

-r nodename This is an option used to test communication to other HP 9000 computers. *nodename* is the remote system name with which you are testing communications.

login and
password These are valid logins and passwords for the remote node specified in *nodename*.

If the NS verification script encounters problems, it prints error message and recovery information to your terminal screen.

Manually Testing the Installation

You can test your NS installation manually as follows:

- Use the NS Quick Verification strategy. Use the `dscopy` command to copy a file from an HP 9000 computer to a remote node, then copy the same file back. (See *dscopy(1)* in the *HP-UX Reference*.) Execute the HP-UX `cmp` command to verify that the copied file is identical to the original file. This exercise tests NS and LAN from the Application Level (OSI Layer 7) down to the Physical Level (OSI Layer 1).
- If NFT fails, test that the NFT daemon is running. Issue the following command:

```
/bin/ps -ef | grep nftdaemon
```

You should see one network daemon in the table of statistics returned to standard output. If you don't see an entry for the daemon, start it by typing the daemon name (as an absolute pathname) on the command line. See the following example:

```
/usr/bin/nftdaemon
```

You must be superuser to start a network daemon. In order for NFT to work, `nftdaemon` must be running.

For a more formalized network testing technique, refer to the link installation manual.

Maintaining NS

This chapter provides information that helps you maintain the NS product on your system. The information is presented in the following sections:

- Setting up security for NS.
- Modifying the probe proxy table.
- Reference: networking daemons and special files.

The first two sections describe the tasks involved in maintaining the NS product and the commands used to perform these tasks. The third section contains a quick reference list of the daemons provided with the NS product and link product configuration files relevant to the NS product.

Setting Up Security for NS

When you connect a computer to a network, you should consider the security of the resources on your computer. Although you can adequately protect certain files from the users on your own system, you may need to protect those files from users on other computers on the network. There are three types of file protection:

- Local and remote logins.
- Access rights.
- Disabled services.

The following subsections describe these file protection methods.

Note

For information on C2 Security, refer to *A Beginner's Guide to HP-UX*, *A Beginner's Guide to Using Shells*, and the *HP-UX System Security* manual.

Local and Remote Logins

The assignment of user logins and passwords for access to the *local* file system offers direct security for your local computer. The assignment of user logins and passwords for access to *remote* file systems is a part of network-wide security.

For NFT commands, the user login and password are a part of the `dscopy` command syntax. (For more information on `dscopy`, see `dscopy(1)` in the *HP-UX Reference*.) A valid login and password must be provided with each `dscopy` request. Access rights are limited to those of the remote login account specified in `dscopy`.

Access Rights

The assignment of access permission (with the `chmod` command) limits accessibility of certain files to certain users. *HP strongly recommends that you limit the assignment of public access rights to files that everyone on the network can safely use.* In general, do not allow anyone to have permission to access files that they have no reason to use.

3-2 Maintaining NS

For NFT commands, users specify a login and password in the `dscopy` command. The login and password specified are checked against the entries in the `/etc/passwd` file on the remote file system. This means that entries such as `who` and `date` are valid system logins when used in a `dscopy` command. You can alleviate this problem by setting low access capabilities for `who` and `date`, or by removing these logins from the `/etc/passwd` file. The latter solution makes it impossible to execute `who` and `date` without logging in.

Disabled Services

An extreme method of network security is to disable the service. In the following situations, access is not limited, it is nonexistent. No one on a node can use the network service.

You can halt all network traffic on a node by issuing the `/etc/ifconfig lann down` command. To halt all network traffic, you must execute an `/etc/ifconfig lann down` command for every network interface on the node, where *n* is the logical unit number of the network interface. All upper-level service requests on the node eventually time-out.

Note

You can also halt all network traffic on a node by issuing the `x25stop -d dev`. For more information refer to the *Installing and Administering X.25/9000*.

You can prevent access to NFT on HP 9000 computers by not starting the daemon processes. You can use the System Administration Manager (SAM) to enable and disable these processes. The procedure for using SAM is described in the next section.

Note

Specific security recommendations for the network diagnostics are documented in *Installing and Administering LAN*. The `ifconfig` command is documented in *Installing and Administering LAN* and in the `ifconfig(1M)` section of the *HP-UX Reference*.

Using SAM to Disable NFT

SAM stands for **System Administration Manager**, a menu-driven utility for performing system administration tasks, including configuration of networking software.

Tips for Using SAM. Remember the following tips when you use SAM. You can also get more information from the main menu item, *How to Use SAM*.

- Use your keyboard's cursor control and editing keys to navigate and edit forms.
- You can select a menu item in *either one* of the following methods:
 - Move the cursor to the menu item using **[Tab]**, the space bar, or the arrow keys and press **[Return]** or **Select Item**.
 - Type enough of the menu item's first word to uniquely identify it. In some cases, this is simply the first letter of the menu item. This method does not work for menu items that start with the same word.
- Access the on-line help screens whenever you need more information, such as how or where to obtain a required configuration value. Note that the **RESULT** sections of the on-line help screens explain what SAM will do "behind the scenes," such as what files SAM will create or modify, or what commands SAM will execute automatically.

Disabling NFT with SAM. The following steps take you to the NS (Network Services) Configuration menu where you can use SAM to disable the `nftdaemon` daemon, preventing access to this service on an NS node:

1. At the HP-UX prompt, type:

```
sam
```

and wait for SAM's main menu to appear.

2. Select the **Networks/Communications** menu item.
3. Select the type of network you wish to configure (either **LAN Hardware and Software** or **X.25 Hardware and Software**).
4. Select the **NS (Network Services) Configuration** menu item.
5. Select the **Disable Network File Transfers To and From This System** menu item.

3-4 Maintaining NS

6. Answer "y" (yes) to the question in the pop-up window.

Note

Once you disable NFT, this menu entry is changed to Enable Network File Transfers To and From This System. Select this to enable NFT again.

7. Press **Perform Task**.
8. Press **Main Menu**.
9. Press **Exit SAM** to exit from SAM.

Note

Since SAM modifies the networking startup file /etc/netnssrc, even if you reboot the system, the NFT service you disabled (or enabled) will remain disabled (or enabled).

Verifying the Service is Disabled

To verify that the NFT service you disabled is no longer running, at the HP-UX prompt, type:

```
ps -ef | grep daemon
```

The far right column should not show an /usr/bin/nftdaemon process.

Modifying the Probe Proxy Table

You can use the NS proxy command to modify, add, append, delete and list entries in the probe proxy table. The proxy command is described in Chapter 2.

Reference: Networking Daemons and Special Files

This section provides a quick reference list of the daemons provided with the NS product and link product configuration files relevant to the NS product.

Daemons

When you bring the system up, the `/etc/netnssrc` initialization script starts the `nftdaemon` daemon process (if it is executable). The `/etc/netnssrc` script is invoked from the LAN initialization script `/etc/netlinkrc`.

<code>netisr</code>	The network interface daemon. It is provided with LAN. It allows for system wide performance improvements, particularly real time responses. For more information about <code>netisr</code> refer to <i>Installing and Administering LAN</i> .
<code>nftdaemon</code>	The daemon used by Network File Transfer (NFT). This daemon must be running to use inbound or outbound NFT. The <code>nftdaemon</code> daemon is located in the <code>/usr/bin</code> directory.

Note	The <code>netisr</code> daemon must run at a higher priority than other network services on the same node.
-------------	--

Configuration Files

There are no configuration files that are unique to the NS product. However, the following configuration files are provided by the link product and include information relevant to the NS product:

<code>/etc/hosts</code>	This file contains the internet addresses, host names, and aliases of remote hosts on the network.
<code>/etc/networks</code>	This file contains the network addresses and names of networks known by the local host.
<code>/etc/services</code>	This file associates each service name and aliases with the port number and protocol that each service uses.
<code>/etc/protocols</code>	This file contains the protocol names of all the protocols known by the local host.

Troubleshooting Network Services

Troubleshooting data communications problems can be a very involved process since there are many hardware and software components to be investigated. Some problems can be quickly identified and resolved. These include invalid software installation, version incompatibilities, insufficient HP-UX resources, corrupt configuration shell scripts, and command errors. Some problems require more investigation.

Once identified, most problems can be resolved by the user or node manager, using the suggestions in this chapter or the instructions provided in the error message appendix (Appendix A). However, there may be problems that require you to contact your HP support representative. As a result, this chapter also provides guidelines to follow when submitting an HP Service Request (SR).

Chapter Overview

The strategy and tools to use while investigating the software and hardware components are provided in this chapter.

This chapter contains the following sections:

- Characterizing the problem.
- Diagnostic tools summary.
- Diagnosing interactive problems.
- Diagnosing gateway and repeater problems.
- Flowchart format.
- Troubleshooting Network Services.
- Contacting your HP support representative.

Characterizing the Problem

It is important to ask questions when you are trying to characterize a problem. Start with global questions and gradually get more specific. Depending on the response, you ask another series of questions, until you have enough information to understand exactly what happened. Key questions to ask are:

1. Does the problem seem isolated to one user? Can the problem be reproduced? Did the problem occur under any of the following circumstances:
 - When issuing a command?
 - When using a nodal management utility?
 - When transmitting data?
2. Does the problem affect all users? The entire node? Has anything changed recently? The possibilities are:
 - New software and hardware installation?
 - Same hardware but changes to the software. Has the configuration file been modified? Has the HP-UX configuration been changed?
 - Same software but changes to the hardware.
 - Do you suspect hardware or software?

It is often difficult to determine whether the problem is hardware or software related. The symptoms of the problem which mean you should suspect the hardware are:

- Intermittent errors.
- Network-wide problems after no change in software.
- Link level errors, from logging subsystem `lanm`, logged to the console.
- Data corruption—link level trace that shows that data is sent without error but is corrupt or lost at the receiver.

The symptoms which mean you should suspect the software are:

- Network Services errors returned.
- Data corruption.
- Logging messages at the console.

Knowing what has changed recently may also indicate whether the problem is software or hardware related.

Diagnostic Tools Summary

The diagnostic tools that you will use most frequently are listed in Table 4-1. These tools are documented in link installation manuals.

Table 4-1. Diagnostic Tools	
Tool	Function
netstat	A nodal management command which returns statistical information regarding your network. (See <i>netstat(1)</i> in the <i>HP-UX Reference</i> .)
landiag	A diagnostic program that tests LAN connections between HP 9000 computers.
link loop	A diagnostic program that runs link-level loopback tests between the HP 9000 systems. Link loop uses IEEE 802.3 link-level test frames to check physical connectivity with the LAN. This diagnostic tool is different from the loopback capability of landiag because it tests only the link-level connectivity and not the transport-level connectivity.
ping	A diagnostic program that verifies the physical connection to a remote host and reports the round-trip communications time between the local and remote hosts. (See <i>ping(1M)</i> in the <i>HP-UX Reference</i> .)
psidad	A utility under DUI that can help to identify problems on the PSI/800 board/card.
rlb	A diagnostic program which tests LAN connections to other HP 9000 computers. rlb does not test a connection to an HP 1000 computer. (See <i>rlb(1M)</i> in the <i>HP-UX Reference</i> .)
x25check x25server	These two work in tandem. x25server runs on the logically remote host (could be same physical host) and echoes packets sent to it over the X.25 network by x25check.
x25stat	A nodal management command that returns status and information of the X.25 device/card. It provides interface status configuration information and virtual circuit statistics.
x25upload	This is used to upload the firmware in case of problems with the firmware on the board.

Table 4-1. Diagnostic Tools	
Tool	Function
<i>Event Logging</i>	A utility that sends informational messages regarding network activity to the system console or to a file.
<i>Network Tracing</i>	A utility that traces link-level traffic to and from a node. HP recommends that you enable tracing only when troubleshooting a problem unsolved by other means.

Diagnosing Interactive Problems

The first step in investigating interactive problems is to get copies of the networking manuals for the networking products installed on your system. Error messages are included in the appendices of these manuals.

If you have received a specific error message, find it in the manual and take the action recommended. Most error messages are easily understood, although some of the explanations refer to internal procedures comprehensible only to qualified HP representatives. You are not expected to understand these explanations, but should follow the actions documented in the manuals.

If you receive an error using the interactive capabilities of NS, refer to the error message appendix of *Using Network Services*. The command errors fit into four categories:

- **Syntax errors or invalid options.** These errors occur when you incorrectly issue a command. To correct the error, check for the correct syntax and reissue the command.
- **Warnings.** Warnings are issued when a command is still executable but the results may not be what you intended. These occur when you specify conflicting options. The warning informs you which option was actually used (or not used).
- **Resource Errors.** These errors occur when a system resource needed for the execution of the command is not available. They should be rare. If they occur, you can wait and reissue the command later, when the resource may be available. If resource errors happen frequently, notify the network manager.
- **Internal Errors.** These errors indicate that the software is malfunctioning. If they ever occur, have your network manager help to notify your HP representative. Follow the steps outlined in "Contacting Your HP Representative" at the end of this chapter.

For more information on command syntax errors and warnings, see the *HP-UX Reference*.

Diagnosing Gateway and Repeater Problems

If you are using a gateway or repeater and you are having difficulty communicating with a host that resides on the other side of the gateway or repeater, then a gateway or repeater failure may have occurred.

Locating the problem can get complicated if you are dealing with a Local Area Network (LAN) as well as a Wide Area Network (WAN). Diagnostic tools are available in the LAN and WAN link products that can help you isolate the problem. For information on these tools, refer to *Installing and Administering LAN/9000* or *Installing and Administering X.25/9000*.

Flowchart Format

 
The flowchart on the following page has a corresponding set of labeled explanations. You can follow the flowchart alone, or follow the flowchart and read the explanations for more detail. The explanations are on the pages following the flowchart.




Start of flowchart n; re-enter current flowchart.




Go to and enter flowchart n.

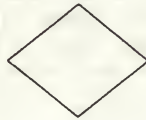

Make a decision.

 

Perform an action.

 

Exit flowchart.

Figure 4-1. Flowchart Format

Troubleshooting Network Services

Use this section if you have trouble using the Network File Transfer (NFT) command or if your NetIPC applications return unexpected errors.

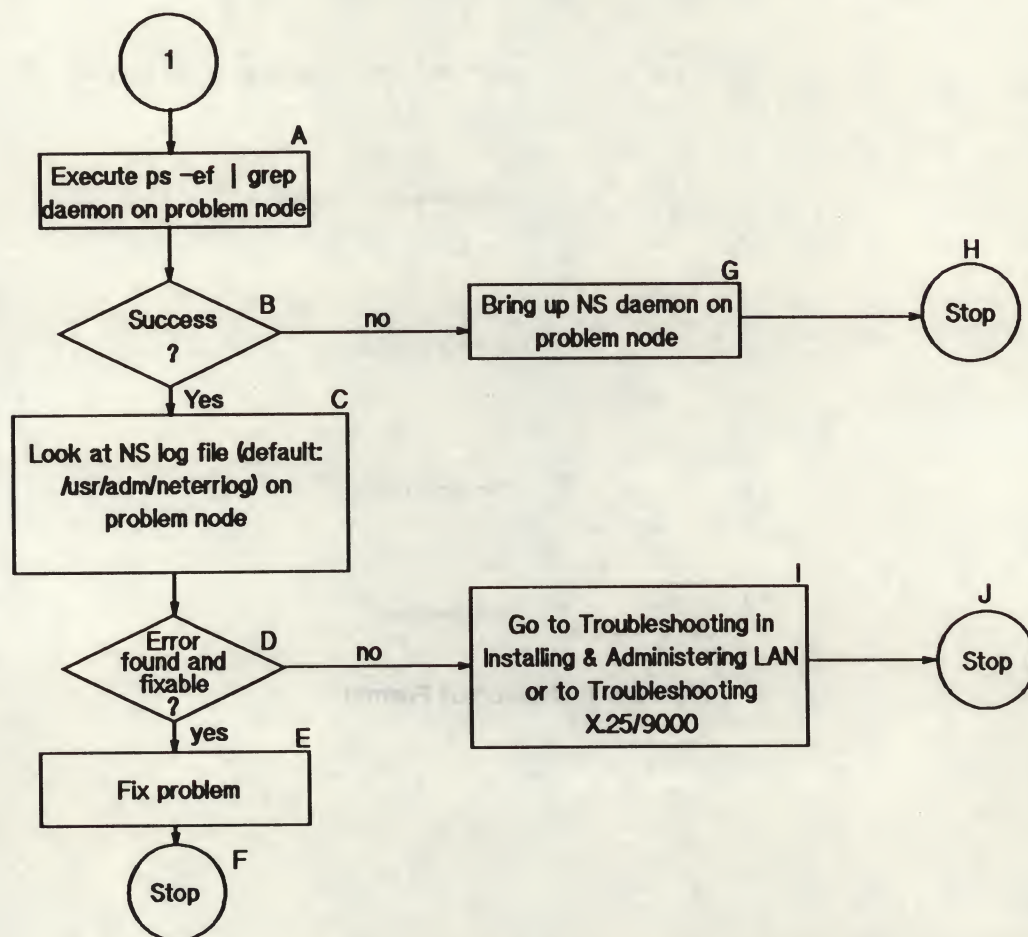 


Figure 4-2. Troubleshooting Network Services

Flowchart 1. NS Troubleshooting

- A. Execute `ps -ef | grep daemon` on problem node. A service daemon entry, in addition to the `grep` entry, returned to standard output ensures that the NS daemon is active on the problem node. Proceed to B.
- B. Success? If so, proceed to C to examine the NS log file for specific log messages; otherwise, proceed to G to activate the NS daemon on the problem node.
- C. Look at the NS Log File on the problem node for specific NS subsystem log messages. The log messages for the specific NS service may be interspersed with other NS log messages. Explanations of the log messages appear in the error message appendix of *Installing and Administering LAN*. The default log file for NS log messages is `/usr/adm/neterrlog`. You may want to stop logging and then restart it with more logging classes enabled to give you more information. See *Installing and Administering LAN* for details on NS event logging. Proceed to D.
- D. Error found and fixable? If so, proceed to E; otherwise, proceed to I to examine lower-level NS software.
- E. Fix Problem. Explanations of the log messages appear in the error message appendix of *Installing and Administering LAN*. Proceed to F.
- F. Stop. If you solved your NS problem, stop troubleshooting.
- G. Bring up NS daemon on problem node. Execute
- `/etc/ns_daemon`
- where `ns_daemon` is the NS service daemon which you are troubleshooting: `rlbdaemon` for the `rlb` diagnostic, `nftdaemon` for the NFT daemon, or `sockregd` for the NetIPC socket registry. Retry the NS activity which prompted you to troubleshoot. Proceed to H.
- H. Stop. If you solved your NS problem, stop troubleshooting.

- I. Go to *Installing and Administering LAN* to check LAN Link connectivity and lower-level software integrity or go to *Troubleshooting X.25/9000*. Proceed to J.
- J. Stop. If you solved your NS problem, stop troubleshooting.

Contacting Your HP Support Representative

If you have no service contract with HP, you may follow the procedure described below, but you will be billed accordingly for time and materials.

If you have a service contract with HP, document the problem as a Service Request (SR) and forward it to your HP Service Representative. Include the following information where applicable:

- A characterization of the problem: Describe whether or not the system ever worked or if it worked once and then failed. Describe the events leading up to and including the problem. Attempt to describe the source of the problem. Describe the symptoms of the problem and what led up to the problem.

Your characterization should include: HP-UX commands; communication subsystem commands; job streams; result codes and messages; and data that can reproduce the problem.

Illustrate as clearly as possible the context of any message(s). Prepare copies of information displayed at the system console and user terminal.

- Obtain the version, update and fix information for all software. Your host node should be running NS and LAN/HP 9000 (8.0 Version) and/or X.25/9000 (8.0 Version).

To check your NS, LAN, or X.25 version, execute the `what file_name` command, where `file_name` is one or more of the following files:

```
/usr/bin/dscopy  
/usr/bin/nftdaemon  
/usr/bin/nftserver  
/usr/bin/vt3k
```

To check the version of your kernel, execute `uname -r`.

This allows Hewlett-Packard to determine if the problem is already known, and if the correct software is installed at your site.

- Record all error messages and numbers that appear at the user terminal and the system console.

- Save all network log files.
- Prepare the formatted output and a copy of the log file for your Hewlett-Packard representative to further analyze.
- Prepare a network map of the HP-UX I/O configuration you are using for your Hewlett-Packard representative to further analyze.
- Try to determine the general area within the software where you think the problem exists. Refer to the appropriate reference manual to gather information about your problem:
 - *Using Network Services.*
 - *Installing and Administering LAN/9000.*
- Document your interim, or “workaround” solution. The cause of the problem can sometimes be found by comparing the circumstances in which it occurs with the circumstances in which it does not occur.
- Create copies of any NS or LAN Link trace files that were active when the problem occurred for your Hewlett-Packard representative to further analyze.
- In the event of a system failure, a full memory dump must be taken. Use the HP-UX utility `/etc/savecore` to save a core dump. Refer to the *System Administration Tasks* manual for details. Send the output to your HP support representative.

Installing and Configuring VT3K

VT3K is an application that allows you to log into a remote MPE (HP 3000) host from a local HP-UX host. VT3K uses NetIPC and works with either MPE V or MPE XL.

This chapter covers:

- Installing VT3K.
- Configuring VT3K.
- Troubleshooting VT3K.

Note VT3K only supports V+ applications.

Installing VT3K

The HP 9000, HP 3000, and your local network should be properly configured for Network Services. If dscopy works between your HP 9000 and HP 3000 systems, then your network has been set up properly.

Because vt3k is a user level program, it requires no other special installation procedures. It does not require any special configuration files or daemons.

Configuring VT3K

VT3K does not require any special configuration files or daemons. It is supported on the following configurations:

- HP 2392 or HP 700/92 terminal connected via RS-232 to a Series 600/800 (connected via LAN to an HP 3000).
- Series 300/400 workstation (connected via LAN to an HP 3000) running HPTERM.

Hpterm (only HP-UX 7.0 or later) offers HP Block Mode terminal emulation if you use X-Windows on a Series 300/400 workstation.

VT3K is supported on HP-UX Release 7.0 or later. The HP-UX `ifconfig` command parameters must be set for IEEE in addition to Ethernet.

On MPE, VT3K requires at least MPE V V-Delta-5 or MPE/XL 1.2. The LAN Link and Network Services products are required on the HP 3000. NS Virtual Terminal Services must be running.

VT3K can cross gateways, but this requires a proxy server machine on your local network with routing information for systems off your local network.

To test if your HP 9000 and HP 3000 are talking, try a remote loop back (`rlb`) from HP-UX to your HP 3000. Ensure `dscopy` is working between the two systems. (See `rlb(1)` and `dscopy(1)` in the *HP-UX Reference*.)

Troubleshooting VT3K

Note

If you are using X-Windows, make sure your `hpterm*termId:` is set to 2392A.

Most VT3K errors are reported via NetIPC error codes. For a complete list of error codes and corrective actions, refer to *NetIPC Programmer's Guide*.

The most common NetIPC error reported is "NSR_NO_NODE (40) node does not exist." This error may stem from the following conditions:

- Remote HP 3000 is not up.
- Node name is incorrect.
- Remote node is on a different network.
- Remote node is running an incorrect version of MPE
- Remote node is not listed on the local network routing tables.

Table 5-1 defines each of the vt3k termination codes.

Table 5-1. vt3k Termination Codes	
Codes	Description
Connection Terminated [0]	Result of a normal logoff.
Connection Terminated [1]	Indicates that someone has issued an ABORTJOB on the MPE session.
Connection Terminated [2]	Indicates that the network has shut down.
Connection Terminated [8]	Indicates that the remote MPE host has no vt ports available.

Error Messages

This appendix lists and describes the error messages that can occur during NS software installation and configuration.

These error messages may be returned by the LAN nodal management commands *nodename*, *route*, *netstat*, and *ifconfig*. (See *nodename(1)*, *route(1M)*, *netstat(1)*, and *ifconfig(1M)* in the *HP-UX Reference*).

Message	permission denied
Cause	Permission to execute either the <code>nodename</code> or <code>ifconfig</code> commands was denied.
Action	You must be a superuser to use the <code>nodename</code> command to configure a node name or to set flags; you must also be a super-user to use the <code>ifconfig</code> command to configure an IP address or set flags.
<hr/>	
Message	invalid node name syntax
Cause	The syntax specified for the node name was invalid.
Action	Check the syntax and try again.
<hr/>	
Message	<code>nodename</code> not yet configured
Cause	The <code>nodename</code> command was used to print the node name before the <code>nodename</code> command was used to configure the system node name.
Action	Use <code>nodename</code> to configure the system node name.
<hr/>	
Message	unexpected error returned from IPC: <i>errno</i>
Cause	A node management command invoked a NetIPC call that returned an error. A NetIPC error code is returned in <i>errno</i> .
Action	Refer to the error codes listed in <i>NetIPC Programmer's Guide</i> for the meaning of <i>errno</i> .
<hr/>	

A-2 Error Messages

Message	no such interface
Cause	The interface name passed to <code>ifconfig</code> does not exist on the system.
Action	Check the spelling and names of interfaces on the system.
<hr/>	
Message	invalid internet address
Cause	The internet address specified was not in the proper form.
Action	Check the syntax and try again.
<hr/>	
Message	IPCCREATE returned error: <i>errno</i>
Cause	The NetIPC call <code>ipccreate()</code> returned an error. The error code is returned in <i>errno</i> .
Action	Refer to the error codes listed in <i>NetIPC Programmer's Guide</i> for the meaning of <i>errno</i> .
<hr/>	
Message	message catalog can't be opened/accessed for language <i>lang</i> . Language C will be used.
Cause	This error can be returned from the <code>ifconfig</code> , <code>netstat</code> , <code>nodename</code> , <code>route</code> , and <code>rlb</code> commands. The message catalog for language <i>lang</i> isn't in <code>/usr/lib/nls/lang</code> .
Action	Verify that the <code>\$LANG</code> variable is set to the correct language. If so, you need to install the desired message catalog.
<hr/>	

Message	ipaddr must be set also
Cause	The super-user attempted to set the subnet mask with <code>ifconfig</code> without specifying an IP address.
Action	Execute the <code>ifconfig</code> command again, specifying both the IP address and the subnet mask.

Message	<code>ifconfig</code> option <code>bad_opt</code> is not supported
Cause	Option <code>bad_opt</code> is invalid.
Action	Check spelling and names of network interfaces on the system and try again.


Message	route: socket: permission denied
Cause	A someone other than the super-user attempted to alter the route table.
Action	Gain super-user access rights or contact the node manager to alter the route table.

Message	not in table
Cause	The super-user tried to delete entry in the route table that does not exist.
Action	Check destination and gateway addresses or symbolic names and execute the route delete command again.

Message	entry in use
Cause	The super-user tried to add an entry to the route table that already exists.
Action	Delete the existing route and add a new one.

A-4 Error Messages

Message	routing table overflow
Cause	You have the maximum number of routes in your routing table.
Action	Delete a route entry no longer used and then add the new entry. Execute the route delete command again.

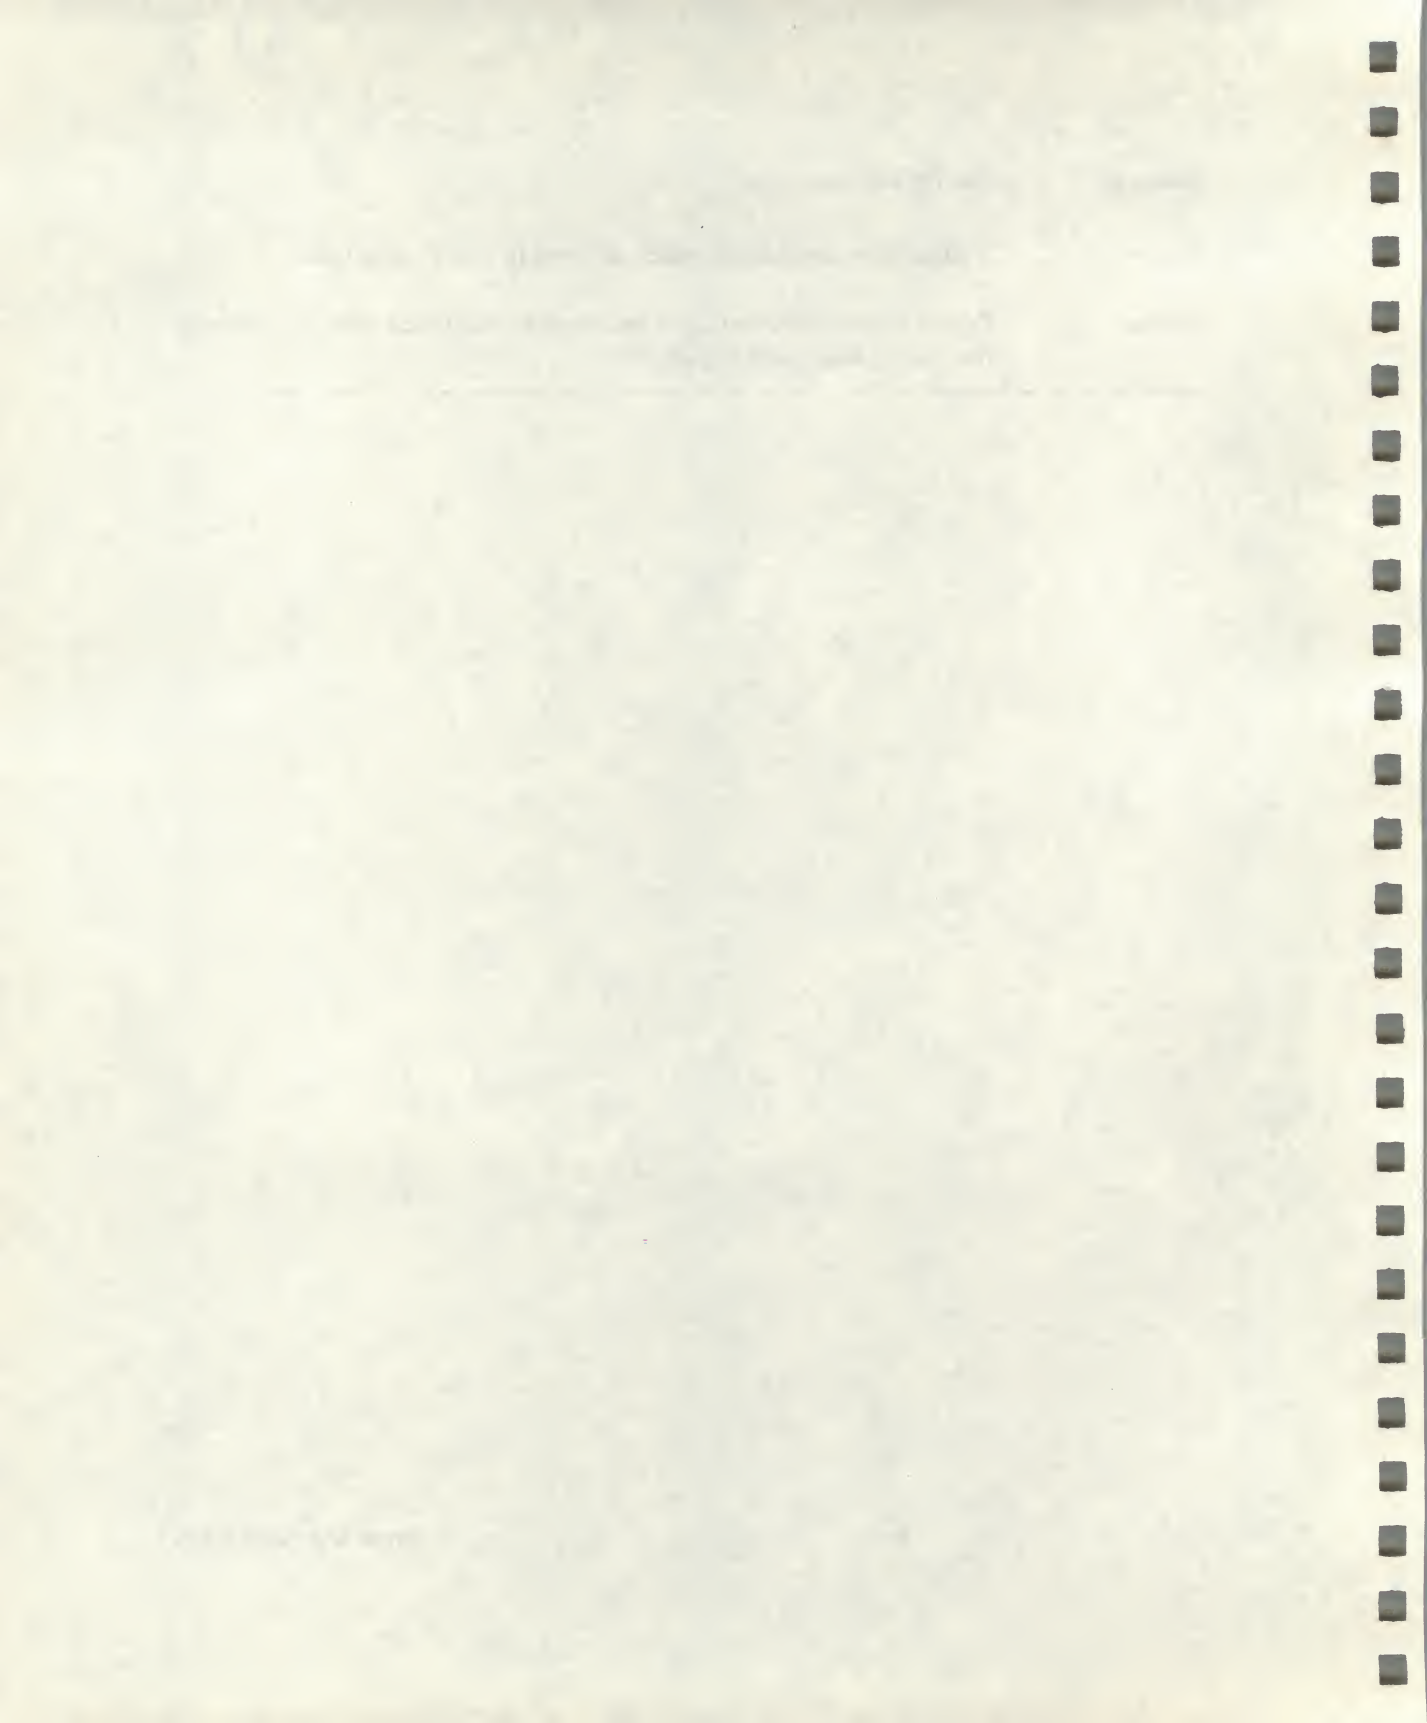 

Moving from RFA to NFS

Remote File Access (RFA), one of the Network Services, has been discontinued. When you used networks consisting of all HP systems, RFA provided distributed file access among HP 9000 computers. In order to maintain distributed file access, you must move to NFS Services.

Why Move to NFS Services?

Using NFS Services in place of the RFA service has several advantages:

- NFS works with other vendors' equipment and other operating systems.
- NFS is a defacto industry standard.
- NFS allows transparent file access.
- NFS with the Network Information Service (NIS) provides centrally administered databases.

Use this appendix to translate your RFA applications to NFS applications.

Similarities

HP NFS Services and RFA have the following similarities:

- No remote device access.
- Not all UNIX[®] semantics are fully supported.

Differences

Refer to the following table for a list of differences between HP NFS and RFA.

NFS Services	RFA (Discontinued)
You can run <code>setuid</code> programs accessing data on remote file systems.	You cannot run <code>setuid</code> programs accessing data on remote file systems.
NFS operates in a heterogeneous operating system environment.	RFA operates on HP-UX operating systems only.
Only the super-user can perform remote NFS mounts.	All users can establish access to remote file systems.
You can centrally administer your databases using NIS.	You have no centrally administered database.
All users with read access to the mount point can read the remote file system.	Only users performing <code>netunam</code> can access the remote file systems.
Read and write file caching occurs on the clients; read caching occurs on the servers.	Read and write file caching occurs on the servers; caching does not occur on the clients.
The servers are stateless (do not remember client activities) and therefore, can be rebooted without interfering with client activities. (The client can resume access to the server when it is rebooted.)	The servers have state and therefore, remember the activities in which the client is involved.
One mount gives you access to only one file system.	One <code>netunam</code> gives you access to all file systems under the root directory.

B-2 Moving from RFA to NFS

Changing Scripts from RFA to NFS

Changing RFA scripts to NFS requires only minor changes. You can change both shell scripts that accept different path names and those that use hard-coded path names.

Shell Scripts that Accept Different Paths

Shell scripts that accept different paths require the following modifications:

- You must perform a remote mount of a file system or directory in *one* of the following ways:
 - As part of the script.
 - Before executing the script.

Since superuser must execute mounts, the script must be `setuid root` if the mount is performed as part of the script.

Caution Having `setuid root` scripts is a potential security problem.

If the script's owner does not have superuser permissions, the superuser can configure `/etc/checklist` to automatically mount the remote file systems at boot time. This process allows users to execute scripts without checking to see if the remote file system is accessible.

- Remove all calls to `netunam` from the script. Removing these calls prevents `netunam` failures from causing the scripts to fail.

Shell Scripts with Hard-Coded Paths

You can handle shell scripts with hard-coded path names in two ways:

- Change the path name in the script to correspond to the NFS mount point.
- Create a path name for the NFS mount point which corresponds to the path name in the script.

To mount the remote file system either as part of the script or automatically via `/etc/checklist`, you must modify the shell scripts as described in the previous section, "Shell Scripts that Accept Different Paths."

Change Pathnames

Change the path name in the script to correspond to the NFS mount point.

EXAMPLE: The script has a hard-coded path name of `/net/systemB/project`. Mount the remote directory `/project` on `/user/project` as follows:

```
mount systemB:/project /user/project
```

Now change the script to use the path name `/user/project` in place of `/net/systemB/project`.

Create New Pathnames

Create a path name for the NFS mount point that corresponds to the path name in the script.

EXAMPLE: The script has a hard-coded path name of `/net/systemB/project` which accesses the remote directory `/project`. To keep the path name the same:

1. Remove the network special file `/net/systemB`.
2. Create the directories `/net/systemB` and `/net/systemB/project`:

```
mount systemB:/project /net/systemB/project
```

Note

For RFA, access to the remote system occurred via a network special file. Creating an NFS mount point with the same name as the network special file for the remote system could cause confusion. Problems will not occur if you remove the network special file.

All remote access will then be via mount points that have the same names as the network special files that were removed.

Subject: [Illegible]

Date: [Illegible]

Reference: [Illegible]

Re: [Illegible]

[Illegible]

[Illegible]

[Illegible]

[Illegible]

Index

C

- cmp command, 2-14
- Configuring NS
 - See* Installing NS
- Conventions, v
- Core dump, 4-14

D

- Daemons
 - netisr daemon, 3-7
 - nftdaemon, 3-7
 - Shipped with NS, 3-7
- Data corruption, 4-3
- Diagnostic tools, 4-5 to 4-6
- Disabled services, 3-3
- dscopy command
 - Security, 3-2
 - Using to test NS installation, 2-14

E

- Error Messages, A-1
- Errors
 - Interactive, 4-7
 - Intermittent, 4-3
 - Internal, 4-7
 - Link Level, 4-3
 - Resource, 4-7
 - Syntax, 4-7
 - Warnings, 4-7
- /etc/hosts, file, 3-8

- /etc/netlinkrc, script, 3-7
- /etc/netnssrc, initialization script, 3-7
- /etc/networks, file, 3-8
- /etc/passwd, file, 3-3
- /etc/protocols, file, 3-8
- /etc/savecore, utility, 4-14
- /etc/services, file, 3-8

I

- ifconfig command, 3-3
- Installing NS
 - Configuration tasks, 2-6
 - Configuring the software, 2-6
 - Creating probe proxy table, 2-8
 - Error messages, A-1
 - /etc/netnssrc, initialization script, 2-5
 - Files created during installation, 2-5
 - Initialization script, 2-5
 - Installing software, 2-4
 - Modifying NS node name, using SAM, 2-6
 - Overview, 2-1
 - proxy command, accessing NS
 - gateway, 2-10
 - proxy command, description, 2-8
 - See also* SAM (System Administration Manager)
 - Setting up NS gateway access, 2-10
 - Steps to install, 2-2
 - update program, 2-4
 - Updating network map, 2-3
 - Verifying installation, manually, 2-14

Verifying installation, using NS
verification script, 2-13

L

Link level errors, 4-3
Logging messages, 4-3

M

Maintaining NS
Access rights, 3-2
Configuration files, 3-8
Daemons, 3-7
Disabled services, 3-3
Disabling NFS, using SAM, 3-3
Disabling NFT, verifying, 3-5
Logins, local and remote, 3-2
Overview, 3-1
Probe proxy table, modifying, 3-6
Security, setting up, 3-2
Special files, 3-7

N

netisr daemon, 3-7
Network File Transfer (NFT), overview, 1-2
Network map, 2-3
Network security, 3-3
Network Services (NS)
 See Installing NS
 See Maintaining NS
 Node name, 1-3
 Product overview, 1-1
 Software components, 1-2
 See VT3K
NFS Services
 RFA (Remote File Access), moving to
 NFS, B-1
 RFA to NFS, changing scripts, B-3

nftdaemon, 3-7

Node name

Domain, 1-3
Modifying, using SAM, 2-6
Organization, 1-3
Overview, 1-3

NS

See Network Services

P

Probe proxy server, creating, 2-8
Probe proxy table, modifying, 3-6
Problem characterization, 4-3 to 4-4
Product overview, 1-1
proxy command, 2-10, 3-3

R

Remote File Access (RFA)
Discontinued, 1-2
Moving from RFA to NFS, B1

S

SAM (System Administration Manager)
Disabling NFT, overview, 3-3
Disabling NFT, procedure for, 3-4
Modifying NS node name, overview, 2-6
Modifying NS node name, procedure
 for, 2-7
NS security, 3-4
Tips for using, 2-6, 3-3
Security
Access rights, 3-2
C2 security, 3-2
Disable services, 3-3
dscopy command, 3-2
/etc/passwd, file, 3-3
Local and remote logins, 3-2

- Setting up, for NS, 3-2
- Types of file protection, 3-2
- Server, probe proxy, 2-8
- Service request, submittal, 4-13 to 4-14
- Software components, 1-2
- System Administration Manager
 - See* SAM

- Testing the connection, 5-3
- Troubleshooting, 5-4
- Using X-Windows, 5-4

T

- Troubleshooting VT3K, 5-4
- Troubleshooting NS
 - Chapter overview, 4-2
 - Contacting your HP support representative, 4-13 to 4-14
 - Diagnosing gateway problems, 4-8
 - Diagnosing interactive problems, 4-7
 - Diagnosing repeater problems, 4-8
 - Diagnostic tools summary, 4-5 to 4-6
 - Flowchart, for NS, 4-10
 - Flowchart, format, 4-9
 - Network-wide problems, 4-3
 - Overview, 4-1
 - Problem characterization, 4-3 to 4-4
 - Problems, identifying causes, 4-3

U

- update program, 2-4

V

- VT3K
 - Applications supported, 5-1
 - Configuring, 5-3
 - dscopy command, 5-2
 - ifconfig parameters, 5-3
 - Installing, 5-2
 - Overview, 1-2, 5-1
 - Termination codes, 5-4

SALES OFFICES

Arranged alphabetically by country

1

Please send directory corrections to:

Test & Measurement Catalog
Hewlett-Packard Company
3200 Hillview Avenue
Palo Alto, CA 94304
Tel: (415) 857-4706
Fax: (415) 857-3880

HEADQUARTERS OFFICES

If there is no sales office listed for your area, contact one of these headquarters offices.

ASIA

Hewlett-Packard Asia Ltd.
22/F Bond Centre, West Tower
89 Queensway, Central
HONG KONG
G.P.O. Box 863, Hong Kong
Tel: 5-8487777
Telex: 76793 HPA HX
Cable: HPASIAL TD

CANADA

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
Fax: (416) 678-9421

EASTERN EUROPE

Hewlett-Packard Ges.m.b.H.
Liebigasse 1
P.O. Box 72
A-1222 VIENNA, Austria
Tel: (222) 2500
Telex: 13 4425 HEPA A

NORTHERN EUROPE

Hewlett-Packard S.A.
V.D. Hooplaan 241
P.O. Box 999
NL-118 LN 15 AMSTELVEEN
The Netherlands
Tel: 20 5479999
Telex: 18919 hpnr

SOUTH EAST EUROPE

Hewlett-Packard S.A.
World Trade Center
110 Avenue Louis-Casai
1215 Cointrin, GENEVA, Switzerland
Tel: (022) 98 96 51
Telex: 27225 hpser
Mail Address:
P.O. Box
CH-1217 Meyrin 1
GENEVA
Switzerland

MIDDLE EAST AND CENTRAL AFRICA

Hewlett-Packard S.A.
International Sales Branch
Middle East/Africa
7, rue du Bois-du-Lan
P.O. Box 364
CH-1217 Meyrin 1
GENEVA
Switzerland
Tel: (41/22) 780 7111
Fax: 783 7535

European Operations
Hewlett-Packard S.A.
150, Route du Nant d'Avril
1217 Meyrin 2
GENEVA, Switzerland
Tel: (41/22) 780 8111
Fax: (41/22) 780 8542

UNITED KINGDOM

Hewlett-Packard Ltd.
Nine Mile Ride
WOKINGHAM
Berkshire, RG11 3LL
Tel: 0344 773 100
Fax: (44/344) 763526

UNITED STATES OF AMERICA

Customer Information Center
(800) 752-0900
6:00 AM to 5:00 PM Pacific Time

EASTERN USA

Hewlett-Packard Co.
4 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 670-4300

MIDWESTERN USA

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800

SOUTHERN USA

Hewlett-Packard Co.
2015 South Park Place
ATLANTA, GA 30339
Tel: (404) 955-1500

WESTERN USA

Hewlett-Packard Co.
5161 Lankershim Blvd.
NORTH HOLLYWOOD, CA 91601
Tel: (818) 505-5600

OTHER INTERNATIONAL AREAS

Hewlett-Packard Co.
Intercontinental Headquarters
3495 Deer Creek Road
PALO ALTO, CA 94304
Tel: (415) 857-5027
Telex: 034-8300
Cable: HEWPAK
Hewlett-Packard Trading S.A.
Bureau de Liaison/Bureau de Sport
Villa des Lions
9, Hai Galloul
DZ-BORDJ EL BAHRI
Tel: 76 02 07
Fax: 281 0387

ANGOLA

Telectra Angola LDA
Empresa Técnica de Equipamentos
16 rue Cons. Julio de Vilhema
LUANDA
Tel: 35515.35516
Telex: 3134

ARGENTINA

Hewlett-Packard Argentina S.A.
Montaneses 2140/50
1428 BUENOS AIRES
Tel: (54/1) 781 4059
(54/1) 781-4090

Laboratorio Rodriguez
Corswant S.R.L.
Misiones, 1156 - 1876
Bernal, Oeste
BUENOS AIRES
Tel: 252-3958, 252-4991

Argentina Esanco S.R.L.
A/ASCO 2328
1416 BUENOS AIRES
Tel: 541-58-1981, 541-59-2767
Telex: 22796 HEW PAC-AR

AUSTRALIA

Customer Information Centre
Tel: (008) 033821

Adelaide, South Australia Office

Hewlett-Packard Australia Ltd.
PARKSIDE, S.A. 5063
153 Greenhill Road
ADELAIDE (Parkside) Sales
Tel: (61-8-) 272-5911
Fax: (61/8) 373-1398

Brisbane, Queensland Office

Hewlett-Packard Australia Ltd.
10 Payne Road
THE GAP, Queensland 4061
Tel: 61-7-300-4133
Telex: 42 133
Cable: HEWPARD Brisbane

Canberra, Australia Capital Territory Office

Hewlett-Packard Australia Ltd.
Thynne Street, Fern Hill Park
BRUCE, A.C.T. 2617
P.O. Box 257,
JAMISON, A.C.T. 2614
Tel: 61-62-51-6999
Telex: 62650
Cable: HEWPARD Canberra

Melbourne, Victoria Office

Hewlett-Packard Australia Ltd.
31-41 Joseph Street
P.O. Box 221
BLACKBURN, Victoria 3130
Tel: (61/3) 895-2895
Fax: (61/3) 898-7831
Cable: HEWPARD Melbourne

Perth, Western Australia Office

Hewlett-Packard Australia Ltd.
Herdsmen Business Park
Cnr. Hasler & Gould Strs.
Osborne Park
CLAREMONT, W.A. 6017
Tel: (61/9) 242 1414
Fax: (61/9) 242-1682
Cable: HEWPARD Perth

Sydney, New South Wales Office

Hewlett-Packard Australia Ltd.
17-23 Talavera Road
P.O. Box 308
NORTH RYDE, N.S.W. 2113
Sydney, Australia
Tel: (61/2) 888-4444
Fax: (61/2) 888-9072
Cable: HEWPARD Sydney

AUSTRIA

Hewlett-Packard GmbH
Verkaufsbüro Graz
Grottenhofstrasse 94
A-8052 GRAZ
Tel: 43-316-291-5660
Telex: 312375

Hewlett-Packard GmbH
Liebigasse 1
P.O. Box 72
A-1222 VIENNA
Tel: (43/222) 2500
Fax: (48/222) 2500 Ext 444

BAHRAIN

Modern Electronic
Establishment
Hewlett-Packard Division
P.O. Box 22015
RIYADH 11495
SAUDI ARABIA
Tel: (966/1) 4763030
Telex: 595 (0495) 202049

Wael Pharmacy
P.O. Box 648
MANAMA
Tel: 256123
Telex: 8550 WAEI BN

BELGIUM

Hewlett-Packard Belgium S.A./N.V.
Blvd de la Woluwe, 100
Woluwedal
1200 BRUSSELS
Tel: (32/2) 761.31.11
Fax: (32/2) 763.06.13

BENIN

S.I.T.E.L.
Immeuble le General
Av. General de Gaulle
P.O. Box 161
ABIDJAN 01
Ivorv Coast
Tel: 32 12 27
Telex: 22149

BERMUDA

Applied Computer Technologies
Atlantic House Building
P.O. Box HM 2091
Par-La-Ville Road
HAMILTON 5
Tel: 295-1616
Telex: 380 3589/ACT BA

BOLIVIA

Arrellano Ltda
Av. 20 de Octubre #2125
Casilla 1383
LA PAZ
Tel: 368541

Siser Ltda. (Sistemas de
Importacion y Servicios Ltda.)
Gabriel Gozalvez 221
Casilla 4084
LA PAZ
Tel: (591/2) 340962/
363365/343245
Fax: 35-9268

BRAZIL

Hewlett-Packard do Brasil S.A.
Praia de Botafogo 228-A-614
6. AND.-CONJ. 601
Edificio Argentina - Ala A
22250 **RIO DE JANEIRO, RJ**
Tel: (55/21) 552-6422
Telex: 21905 HPBR BR
Cable: HEWPAK Rio de Janeiro

BRUNEI

Komputer Wisman Sdn Bhd
G6, Chandrawaseh Cmplx,
Jalan Tutong
P.O. Box 1297
BANDAR SERI BEGAWAN
NEGARA BRUNI DARUSSALAM
Tel: 673-2-2000-70/26711

BURKINA FASSO

S.I.T.E.L.
Immeuble le General
Avenue General de Gaulle
P.O. Box 161
ABIDJAN 01
Ivory Coast
Tel: 32 12 27
Telex: 22149

CAMEROON

R.T.I.
175 Rue Blomet
75015 PARIS
France
Tel: (1) 45 31 0906
Telex: 203376
Fax: (1) 45 31 09 18

CANADA

Alberta
Hewlett-Packard (Canada) Ltd.
3030 3rd Avenue N.E.
CALGARY, Alberta T2A 6T7
Tel: (1/403) 235-3100
Fax: (1/403) 272-2299
Hewlett-Packard (Canada) Ltd.
11120-178th Street
EDMONTON, Alberta T5S 1P2
Tel: (1/403) 486-6666
Fax: (1/403) 489-8764

SALES OFFICES

Arranged alphabetically by country (cont'd)

CANADA (Cont'd)

British Columbia

Hewlett-Packard (Canada) Ltd.
10691 Shellbridge Way
RICHMOND,
British Columbia V6X 2W8
Tel: (1/604) 270-2277
Fax: (1/604) 270-0859

Manitoba

Hewlett-Packard (Canada) Ltd.
1825 Inkster Blvd.
WINNIPEG, Manitoba R2X 1R3
Tel: (204) 694-2777

New Brunswick

Hewlett-Packard (Canada) Ltd.
814 Main Street
MONCTON, New Brunswick E1C 1E6
Tel: (506) 855-2841

Nova Scotia

Hewlett-Packard (Canada) Ltd.
201 Brownlow Avenue
DARTMOUTH, Nova Scotia B3B 1W2
Tel: (1/902) 469-7820
Fax: (1/902) 468-2817

Hewlett-Packard
(Canada) Ltd.
475 Hood Rd., Unit #2
MARKHAM, L3R 8H1
Tel: (416) 479-1770

Ontario

Hewlett-Packard (Canada) Ltd.
552 Newbold Street
LONDON, Ontario N6E 2S5
Tel: (1/519) 686-9181
Fax: (1/519) 686-9145

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (1/416) 678-9430
Fax: (1/416) 673-7253

Hewlett-Packard (Canada) Ltd.
2670 Queensview Dr.
OTTAWA, Ontario K2B 8K1
Tel: (1/613) 820-6483
Fax: (1/613) 820-0377

Hewlett-Packard (Canada) Ltd.
3790 Victoria Park Ave.
WILLOWDALE, Ontario M2H 3H7
Tel: (1/416) 499-2550

Quebec

Hewlett-Packard (Canada) Ltd.
17500 Trans Canada Highway
South Service Road
KIRKLAND, Quebec H9J 2X8
Tel: (1/514) 697-4232
Fax: (1/514) 697-6941

Saskatchewan

Hewlett-Packard (Canada) Ltd.
#1, 2175 Airport Rd.
SASKATOON, Saskatchewan S7L 7E1
Tel: (306) 242-3702

CHILE

Ricardo Borzutsky
Avanzados Sistemas de
Conocimientos S. A.
Austria 2041
SANTIAGO
America del Sur
Tel: (562) 223-5946/6148

CHINA, People's Republic of

China Hewlett-Packard Co., Ltd.
22/F Bond Centre, West Tower
89 Queensway, Central
HONG KONG
Tel: (852/5) 8487777
Fax: (852/5) 868 4997

China Hewlett-Packard Co., Ltd.
P.O. Box 9610, Beijing
38 Bei San Huan X1 Road
Shuang Yu Shu, Hai Dian District
BEIJING
Tel: 256-6888
Fax: 256-3207

China Hewlett-Packard Co., Ltd.
23/F Shanghai Union Building
100 Yan An Road
SHANGHAI
Tel: 203-240
Fax: 202-149

COLOMBIA

Instrumentación
H. A. Langebaek & Kier S. A.
Carrera 4A No. 52A-26
Apartado Aereo 6287
BOGOTÁ, D. E.
Tel: 212-1466
Telex: 44400 INST CO
Cable: AARIS Bogota

CONGO

Sema-Metra
16-18 Rue Barbes
92126 Montrouge Cedex
FRANCE
Tel: (1) 657/300
Telex: 200601.Semetra
Fax: (1) 46 56 96 53

COSTA RICA

Cientifica Costarricense S. A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado: 10159
SAN JOSÉ
Tel: 9-011-506-243-820
Telex: 3032367 GALGUR CR
Continex S. A.
Avenida 10C
Apartado 746-1000
34-36 **SAN JOSÉ**
Tel: (506) 33-0933
Telex: 2310 Continex CR
Fax: 21-6905

O. Fischel R. Y. Cia. S. A.
Apartados 434-10174
SAN JOSÉ
Tel: 23-72-44
Telex: 2379
Cable: OFIR

CYPRUS

Hellamco - M. Cotoyannis
2, Sikelianou St. & Kifissias Av.
P.O. Box 65074
N. Psychiko 15410
ATHENS
Greece
Tel: 647 79 426, 647 79 427
Telex: 224903

Telexera Ltd.
P.O. Box 1152
Valentine House
8 Stassandrou St.
NICOSIA
Tel: 45 628, 62 698
Telex: 5845 tlr cy

DEMSTAR Ltd.
P.O. Box 2260
NICOSIA
Cyprus
Tel: 44 10 64
Telex: 3085
Fax: 46 46 35

DENMARK

Hewlett-Packard A/S
Kongevejen 25
3460 **BRIKEROED**
Tel: (45/42) 816640
Fax: (45/42) 815810
Hewlett-Packard A/S
Rølgadesvej 32
DK-8240 **RISSKOV**, Aarhus
Tel: 45-06-17-6000
Telex: 37409 hpas dk

DOMINICAN REPUBLIC

Microprog S. A.
Juan Tomás Mejía y Cotes No. 60
Arroyo Hondo
SANTO DOMINGO
Tel: 565-6268
Telex: 4510 ARENTA DR (RCA)

ECUADOR

CYEDE Cia. Ltda.
Avenida Eloy Alfaro 1749
y Belgica
Casilla 6423 CCI
QUITO
Tel: 9-011-593-2-450975
Telex: 39322548 CYEDE ED

EGYPT

International Engineering Associates
6 El Gamaa Street
Agouza
CAIRO
Tel: 71-21-681 348 0904
Telex: 93830 IEA UN
Cable: INTEGASSO

EL SALVADOR

IPESA de El Salvador S. A.
29 Avenida Norte 1223
SAN SALVADOR
Tel: 9-011-503-266-858
Telex: 301 20539 IPESA SAL

ETHIOPIA

R.T.I.
175 rue Blomet
75016 **PARIS**
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

FINLAND

Hewlett-Packard Finland
Field Oy
Niittyanpolku 10
00620 **HELSINKI**
Tel: (90) 757-1011
Telex: 122022 Field SF

Hewlett-Packard Oy
Piispankaliontie 17
02200 **ESPOO**
Tel: (358/0) 88721
Fax: (358/0) 887 2277

Hewlett-Packard Oy
Vainonkatu 9 C
40100 **JYVASKYLÄ**
Tel: (358/41) 21 85 11

Hewlett-Packard Oy
Valtatie 57
90500 **OULU**
Tel: (358/81) 340 144

FRANCE

Hewlett-Packard France
Z.I. Mercure B
Rue Berthelot
13763 Les Milles Cedex
AIX-EN-PROVENCE
Tel: 33-42-59-41-02
Telex: 410770F

Hewlett-Packard France
ZA Kergaradec
Rue Fernand Forest
29239 **GOUESNOU** (Brest)
Tel: (98) 41-87-90

Hewlett-Packard France
Chemin des Mouilles
Boite Postale 162
69131 **ECULLY** Cedex (Lyon)
Tel: (33) 72-29-32-93
Telex: 310617F

Hewlett-Packard France
Z.I. Mercure B
Rue Berthelot
F-13763 **LES MILLES** Cedex
Aix-en-Provence
Tel: (33/42) 59-41-02
Telex: 410770
Fax: 594872

Hewlett-Packard France
Parc Club des Tanneries
Batiment B4
4, Rue de la Faisanderie
67381 **LINGOLSHHEIM** (Strasbourg)
Tel: (88) 76-15-00
Telex: 890141F

Hewlett-Packard France
Parc d'activités Cadéra
Quartier Jean-Mermoz
Avenue du Président JF Kennedy
33700 **MÉRIGNAC** (Bordeaux)
Tel: (33) 56-34-00-84
Telex: 550105F

Hewlett-Packard France
Miniparc-ZIRST
Chemin du Vieux Chêne
38240 **MEYLAN** (Grenoble)
Tel: (76) 90-38-40

Hewlett-Packard France
Ru de l'Hôtelierie
Le Petit Bel Air
44470 **CANQUEFOU** (Nantes)
Tel: 40-30-38-38
Telex: 711085F

Hewlett-Packard France
Parc Tertiaire Héliopolis
Route de Micy
45380 **LA CHAPELLE ST MESMIN** (Orléans)
Tel: 38-43-93-56
Telex: 783 497F

Hewlett-Packard France
Zone Industrielle de Courtaboeuf
1, av. du Canada
91947 **LES ULIS** Cedex (Orsay)
Tel: 69-82-60-60
Telex: 600048F

R.T.I. (Realisations
Télématiques Internationales)
175, rue Blomet
F-75015 **PARIS**
Tel: (33/1) 45310906
Telex: 42/203376

Hewlett-Packard France
Parc d'activités de la Poterie
Rue Louis Kerautrel-Botmel
35000 **RENNES**
Tel: 99-51-42-44
Telex: 740912F

Hewlett-Packard France
45, rue des 3 Soeurs
Centre d'Affaires Paris Nord II
F-93420 Villepinte
B.P. 60020
F-95971 **ROISSY**
CHARLES DE GAULLE Cédex
Tel: (33/48) 91-68-00
Telex: 232366
Fax: 632183

Hewlett-Packard France
P.A.T. Lavatine
3, rue Jacques Monod
BP 185
76136 **MONT-ST-AIGNAN** (Rouen)
Tel: 35-59-19-20
Telex: 770035F

Hewlett-Packard France
Innoparc
BP 167 - Voie n°7
31328 **LABEGE** Cedex (Toulouse)
Tel: 61-39-11-40
Telex: 531639F

Hewlett-Packard France
Les Cardoulines
Batiment B2
Route des Dolines
Parc d'activité de Valbonne
Sophia Antipolis
06560 **VALBONNE** (Nice)
Tel: 93-65-39-40

Hewlett-Packard France
Parc d'activité des Prés
1, Rue Papin Cedex
59658 **VILLENEUVE D'ASCQ**
Tel: 20-91-41-25
Telex: 160124F

FRENCH WEST INDIES (Antilles)

R.T.I.
175, Rue Blomet
75015 PARIS
FRANCE
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

GABON

R.T.I. Cameroon
Distribution/Services
B.P. 3899
DOULA, CAMEROON
(Please contact R.T.I. France.)
Tel: (237) 423291
Telex: 970/5385

R.T.I.
175, rue Blomet
75015 PARIS
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

GERMAN FEDERAL REPUBLIC

Hewlett-Packard GmbH
Vertriebszentrale Deutschland
Hewlett-Packard-Strasse
Postfach 1641
D-6380 BAD HOMBURG v.d.H.
Tel: (06172) 400-0
Telex: 410 844 hpbhg

Hewlett-Packard GmbH
Geschäftsstelle
Keithstrasse 2-4
D-1000 BERLIN 30
Tel: (030) 21 99 04-0
Telex: 018 3405 hpbld

Hewlett-Packard GmbH
Verbindungsstelle Bonn
Friedrich-Ebert-Allee 26
5300 BONN
Tel: (0228) 234001
Telex: 8869421

Hewlett-Packard GmbH
Vertriebszentrum Südwest
Schickardstrasse 2
D-7030 BOBLINGEN
Postfach 1427
Tel: (49/7031) 645
Fax: (49/7031) 645-429

Hewlett-Packard GmbH
Zentralbereich Mktg
Herrenberger Strasse 130
D-7030 BOBLINGEN
Tel: (49/7031) 14-0
Fax: (49/7031) 14-2999

Hewlett-Packard GmbH
Geschäftsstelle
Schleefstr. 28a
D-4600 DORTMUND-41
Tel: (0231) 45001
Telex: 822858 hepdod

Hewlett-Packard gmbh
Reparaturzentrum Frankfurt
Bernar Strasse 117
6000 FRANKFURT/MAIN 60
Tel: (069) 500001-0
Telex: 413249 hpflfm

Hewlett-Packard GmbH
Vertriebszentrum Nord
Kapstadtring 5
D-2000 HAMBURG 60
Tel: 49-40-63-804-0
Telex: 021 63 032 hphh d

Hewlett-Packard GmbH
Geschäftsstelle
Heidering 37-39
D-3000 HANNOVER 61
Tel: (49/511) 5706-0
Fax: (49/511) 5706-126

Hewlett-Packard GmbH
Geschäftsstelle
Rossauer Weg 2-4
D-6800 MANNHEIM
Tel: 49-0621-70-05-0
Telex: 0462105 hpmhm

Hewlett-Packard GmbH
Geschäftsstelle
Messerschmittstrasse 7
D-7910 NEU ULN
Tel: 49-0731-70-73-0
Telex: 0712816 HP ULM-D

Hewlett-Packard GmbH
Geschäftsstelle
Emmericher Strasse 13
D-8500 NÜRNBERG 10
Tel: (0911) 5205-0
Telex: 0623 860 hpnbg

Hewlett-Packard GmbH
Vertriebszentrum Ratingen
Berliner Strasse 111
D-4030 RATINGEN
Postfach 31 12
Tel: (02102) 494-0
Telex: 589 070 hprad

Hewlett-Packard GmbH
Vertriebszentrum Muchen
Eschenstrasse 5
D-8028 TAUFKIRCHEN
Tel: 49-89-61-2070
Telex: 0524985 hpmch

Hewlett-Packard GmbH
Geschäftsstelle
Ermslallee
7517 WALDBRONN 2
Postfach 1251
Tel: (07243) 602-0
Telex: 782 838 hepk

GREAT BRITAIN See United Kingdom

GREECE

Hewlett-Packard Hellas
32, Kiffissias Avenue
15125 Amaroussion
ATHENS
Greece
Tel: 6828811
Telex: 216588 hpat gr
Fax: 6832978

GUATEMALA

IPESA DE GUATEMALA
Avenida Reforma 3-48, Zona 9
GUATEMALA CITY
Tel: 316627, 317853, 66471/5
9-011-502-2-316627
Telex: 3055765 IPESA GU

GUINEA

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

HONG KONG

Hewlett-Packard Asia, Ltd.
22/F, West Tower Bond Centre
89 Queensway Central
HONG KONG
Tel: (852/5) 848-7777
Fax: (85215) 868-4997
Cable: HEWPACK HONG KONG

ICELAND

Hewlett-Packard Iceland
Hoefdabakka 9
112 REYKJAVIK
Tel: 354-1-67-1000
Telex: 37409
Fax: 354-1-673031

INDIA

Computer products are sold through
Blue Star Ltd. All computer repairs
and maintenance service is done
through Computer Maintenance Corp.

Blue Star Ltd.
B. D. Patel House
Near Sardar Patel Colony
AHMEDABAD 380 014
Tel: 403531, 403532
Telex: 0121-234
Cable: BLUE FROST

Blue Star Ltd.
40/4 Lavelle Road
BANGALORE 560 001
Tel: 57881, 867780
Telex: 0845-430 BSLBIN
Cable: BLUESTAR

Blue Star Ltd.
Sahas
414/2 Vir Savarkar Marg
Prabhadevi
BOMBAY 400 025
Tel: 422-6155
Telex: 011-71193 BSSS IN
Cable: FROSTBLUE

Blue Star Ltd.
Kalyan, 19 Vishwas Colony
Alkapuri, BARODA, 390 005
Tel: 65235, 65236
Cable: BLUE STAR

Blue Star Ltd.
7 Hare Street
P.O. Box 506
CALCUTTA 700 001
Tel: 230131, 230132
Telex: 031-61120 BSNF IN
Cable: BLUESTAR

Blue Star Ltd.
13 Community Center
New Friends Colony
NEW DELHI 110 065
Tel: 682547
Telex: 031-2463
Cable: BLUEFROST

Blue Star Ltd.
2-2-47/1108 Bolarum Rd.
SECUNDERABAD 500 003
Tel: 72057, 72058
Telex: 0155-459
Cable: BLUEFROST

Blue Star Ltd.
T.C. 7/603 Poornima
Maruthunkuzhi
TRIVANDRUM 695 013
Tel: 65799, 65820
Telex: 0884-259
Cable: BLUESTAR

Hewlett-Packard India
Meridian Commercial Complex
6th Floor
8 Windsor Place
Janpath
NEW DELHI 110 001
Tel: 91-11384911
Telex: 31-4935 HPNDIN

INDONESIA

BERCA Indonesia P.T.
P.O. Box 496/Jkt.
Jl. Abdul Muis 62
JAKARTA
Tel: 21-373009
Telex: 46748 BERSAL IA
Cable: BERSAL JAKARTA

BERCA Indonesia P.T.
P.O. Box 2497/Jkt
Antara Bldg., 12th Floor
Jl. Medan Merdeka Selatan 17
JAKARTA-PUSAT
Tel: 21-340417
Telex: 46748 BERSAL IA

BERCA Indonesia P.T.
Jalan Kutai 24
SURABAYA
Tel: 67118
Telex: 31146 BERSAL SB
Cable: BERSAL-SURABAYA

IRAQ

Hewlett-Packard Trading S.A.
Service Operation
Al Mansoor City 609/10/7
BAGHDAD
Tel: 551-49-73
Telex: 212-455 HEPAIRAQ IK

IRELAND

Hewlett-Packard Ireland Ltd.
Temple House, Temple Road
Blackrock, Co. DUBLIN
Tel: (353/1) 883399
Telex: 30439

Hewlett-Packard Ltd.
75 Belfast Rd, Carrickfergus
Belfast BT38 8PH
NORTHERN IRELAND
Tel: 09603-67333
Telex: 747626

ISRAEL

Eidan Electronic Instrument Ltd.
P.O. Box 1270
JERUSALEM 91000
16, Ohaliav St.
JERUSALEM 94467
Tel: 533 221, 553 242
Telex: 25231 AB/PAKRD IL

Computation and Measurement
Systems (CMS) Ltd.
11 Masad Street
67060
TEL-AVIV
Tel: 388 388
Telex: 33569 Motil IL

ITALY

Hewlett-Packard Italiana Spa
Via G. di Vittorio 10
20094 CORISCO (MI)
Tel: 02/4408351
Fax: 02/4409964

Hewlett-Packard Italiana Spa
Via Nuova Rivoltana 95
20090 LIMITO (MI)
Tel: 02/75761
Fax: 02/7576230

Hewlett-Packard Italiana Spa
Via Emilia 51/C
40011 ANZOLA
DELL'EMILIA (BO)
Tel: 051/731061

Hewlett-Packard Italiana Spa
Via M. Ricci 17 - Palombina Nuova
60100 ANCONA
Tel: 071/883782

Hewlett-Packard Italiana Spa
Traversa 99C Giulio Petroni 19
70124 BARI
Tel: 080/410744
Fax: 080/417891

Hewlett-Packard Italiana Spa
Via Principe Nicola 43G/C
95126 CATANIA
Tel: 095/371087
Fax: 095/388569

Hewlett-Packard Italiana Spa
Via G. Di Vittorio 9
20063 CERNUSCO S/N (MI)
Tel: 02/923691
Fax: 02/9237746

Hewlett-Packard Italiana Spa
Via Sacco e Vanzetti 1/A
50145 FIRENZE
Tel: 055/318533
Fax: 055/373965

Hewlett-Packard Italiana Spa
Viale Brigata Bisagno 2
16129 GENOVA
Tel: 010/541141
Fax: 010/591733

Hewlett-Packard Italiana Spa
Via Orazio 16
80122 NAPOLI
Tel: 081/7611444
Fax: 081/680164

Hewlett-Packard Italiana Spa
Via Pellizzo 15
35128 PADOVA
Tel: 049/8070166
Fax: 049/773097

Hewlett-Packard Italiana Spa
Via Del Tintoretto 200
00144 ROMA
Tel: 06/54831
Fax: 06/5408710

SALES OFFICES

Arranged alphabetically by country (cont'd)

ITALY (Cont'd)

Hewlett-Packard Italiana Spa
Corso Svizzera 185
10149 **TORINO**
Tel: 011/744044
Fax: 011/7710815

IVORY COAST

Ste Ivoirienne des Techniques
de l'Informatique
Immeuble C.N.A. - 5e etage
Avenue General de Gaulle
P.O. Box 161
ABIDJAN 01
Tel: 32 12 27
Telex: 22149

Engineering Business Concept (E.B.C.)
Angle Avenue J. Anoma et Bd.
République
08 B.P. 323 **ABIDJAN 08**
Tel: 32 50 24, 41 48 70
Fax: 35 37 90

JAPAN

Yokogawa-Hewlett-Packard Ltd.
Nihon-Seimei Akita
Chuo-Dori Bldg.
4-2-7 Naka-dori
AKITA, 010
Tel: (81/188) 36-5021

Yokogawa-Hewlett-Packard Ltd.
152-1, Onna
ATSUGI, Kanagawa, 243
Tel: (81/462) 25-0031
Fax: (81/462) 25-0064

Yokogawa-Hewlett-Packard Ltd.
3-1 Motochiba-Cho
CHIBA, 280
Tel: (81/472) 25-7701
Fax: (81/472) 21-0382

Yokogawa-Hewlett-Packard Ltd.
Daichi-3 Hakata-Kaisai Bldg.
1-3-6 Hakata-eki Minami
Hakata-Ku, **FUKUOKA 812**
Tel: (81/92) 472-8731

Yokogawa-Hewlett-Packard Ltd.
Nihon-Dantai-Seimei-
Koriyama Bldg.
21-10 Toramaru-Cho,
Koriyama **FUKUSHIMA, 963**
Tel: (81/249) 39-7111

Yokogawa-Hewlett-Packard Ltd.
Yasuda-Seimei Hiroshima Bldg.
6-11, Hon-dori, Naka-ku
HIROSHIMA, 730
Tel: (81/82) 241-0611
Fax: (81/82) 241-0619

Yokogawa-Hewlett-Packard Ltd.
Issei Bldg.
2-3-17 Takezono, Tsukuba
IBARAGI, 305

Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Bldg.
1-4-73, Sanno-maru
Mito, **IBARAKI 310**
Tel: (81/292) 25-7470

Yokogawa-Hewlett-Packard Ltd.
Towa Building 2-2-3
Kaigan-dori, Chuo-ku
KOBE, 650
Tel: (81/78) 392-4791
Fax: (81/78) 392-4839

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi 82 Bldg.
3-4 Tsukuba
KUMAGAYA, Saitama 360
Tel: (81/485) 24-6563
Fax: (81/485) 24-9050

Yokogawa-Hewlett-Packard Ltd.
Shin-Kyoto Center Bldg.
614 Higashi-Shioji-cho
Karasuma-Nishi-Iru, Shioji-Dori
Shimogyo-Ku, **KYOTO, 600**
Tel: (81/75) 343-0921
Fax: (81/75) 343-4356

Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Bldg.
1-4-73, Sanno-Maru
Mito, **IBARAKI 310**
Tel: (81/292) 25-7470
Fax: (81/292) 31-6589

Yokogawa-Hewlett-Packard Ltd.
Nagano-Tokyo-kaiyo Bldg.
1081, Minamiagata-Machi
Nagano-Shi, **NAGANO, 380**
Tel: (81/262) 24-8012
Fax: (81/262) 24-8016

Yokogawa-Hewlett-Packard Ltd.
Nagoya Kokusai Center Building
1-47-1, Nagano, Nakamura-ku
NAGOYA, AICHI 450
Tel: (81/52) 571-5171
Fax: (81/52) 565-0896

Yokogawa-Hewlett-Packard Ltd.
Sai-Kyo-Ren Building
1-2 Dote-cho
OOMIYA-SHI SAITAMA 330
Tel: (0486) 45-8031

Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg., 5-4-20 Nishi-Nakajima
4-20 Nishinakajima, 5 Chome,
Yodogawa-ku
OSAKA, 532
Tel: (81/6) 304-6021
Fax: (81/6) 304-0216

Yokogawa-Hewlett-Packard Ltd.
1-27-15, Yabe
SAGAHARA Kanagawa, 229
Tel: (81/427) 59-1311

Yokogawa-Hewlett-Packard Ltd.
Hamamatsu Motoshiro-Cho Daichi
Seimei Bldg 219-21, Motoshiro-Cho
Hamamatsu-shi
SHIZUOKA, 430
Tel: (81/534) 56-1771
Fax: (81/534) 552371

Yokogawa-Hewlett-Packard Ltd.
Shinjuku Daichi Seimei Bldg.
Nishi Shinjuku 2-7-1,
Shinjuku-ku, **TOKYO 163**
Tel: (81/3) 348-4611
Fax: (81/3) 348-7969

Yokogawa-Hewlett-Packard Ltd.
9-1, Takakura-cho
Hachioji-shi, **TOKYO, 192**
Tel: 81-426-42-1231

Yokogawa-Hewlett-Packard Ltd.
Tokyo-Nissam-Minato Bldg.
1-6-34 Konan, Minato-Ku
TOKYO 108
Tel: (81/3) 458-5411

Yokogawa-Hewlett-Packard Ltd.
29-21 Takaido-Higashi, 3-chome
Suginami-ku **TOKYO 168**
Tel: (03) 331-6111
Telex: 232-2024 YHPTOK

Yokogawa Hokushin Electric Corp.
(YEW)
Shinjuku-NS Bldg. 10F
9-32 Nakacho 2 Chome
Shinjuku-ku
TOKYO, 163
Tel: (03) 349-1859
Telex: J27584

Yokogawa-Hewlett-Packard Ltd.
Toyoda-Tokyo-Kaijo Bldg.
1-179 Miyuki-Hon-Cho
TOYODA 473
Tel: (81/565) 27-5611

Yokogawa-Hewlett-Packard Ltd.
Chiyo-dasei-Utsunomiya Bldg.
2-3-1, Ohdori, **UTSUNOMIYA, Tochigi-**
Shi 320
Tel: (81/286) 33-1153
Fax: (81/286) 33-1175

Yokogawa-Hewlett-Packard Ltd.
No. 2 Yasuda Bldg.
2-32-12, Tsuruyo-cho
Kanagawa-ku, **YOKOHAMA 221**
Tel: (81/45) 312-1252
Fax: (81/45) 311-8328

KENYA

ADCOM Ltd., Inc., Kenya
P.O. Box 30070
NAIROBI
Tel: 331955
Telex: 22639

KOREA

Samsung Hewlett-Packard Co. Ltd.
Dongbang Yeeouido Building
36-1 Yeouido Do-Dong
Yongdeungpo-Ku
SEOUL, 150
Tel: (82/2) 784-4666, 784-2666
Fax: (82/2) 784-7084
Telex: 25166 SAMSAN K

KUWAIT

Al-Khaldiya Trading & Contracting
P.O. Box 830
SAFAT 13009
Tel: 242 49 10, 241 17 26
Telex: 22481 AREEG KT
Cable: VISCOUNT

LEBANON

Computer Information Systems S.A.L.
Chammass Building
P.O. Box 61-6274
DORA BEIRUT
Tel: 89 31 13, 58 18 35
Telex: 42309 cnacis le
Fax: 58 18 34

LUXEMBOURG

Hewlett-Packard Belgium S.A./N.V.
Blvd de la Woluwe, 100
Woluwedall
B-1200 **BRUSSELS**
Tel: (32/2) 761-3111
Telex: 23-494 paloben bru

MADAGASCAR

R.T.I.
175, Rue Blomet
75015 **PARIS**
FRANCE
Tel: (1) 45 31 09 06
Tlx: 203376
Fax: (1) 45 31 09 18

MALAWI

Syston (Private) Ltd.
Manhattan Court
61 Second Street
P.O. Box 3458
HARARE
Zimbabwe
Tel: 739881/739885
Telex: 4122
Fax: 70 20 08

MALAYSIA

Hewlett-Packard Sales (Malaysia)
Sdn. Bhd.
9th Floor
Chung Khiao Bank Building
46, Jalan Raja Laut
50350 **KUALA LUMPUR, MALAYSIA**
Tel: (60/3) 298-6555
Fax: (60/3) 291-5495
Protel Engineering
P.O. Box 1917
Lot 6624, Section 64
23/4 Pending Road
Kuching, **SARAWAK**
Tel: 36299
Telex: 70904 PROMAL MA
Cable: PROTELENG

MALTA

R.T.I.
175, Rue Blomet
75015 **PARIS**
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

MAURITANIA

R.T.I.
175, Rue Blomet
75015 **PARIS**
France
Tel: (1) 45 31 09 06
Tlx: 203376
Fax: (1) 45 31 09 18

MAURITIUS

R.T.I.
175, Rue Blomet
75015 **PARIS**
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

MEXICO

Hewlett-Packard de Mexico.
S.A. de C.V.
Rio Nio No. 4049 Desp. 12
Fracc. Cordoba
JUAREZ, Mexico
Tel: 161-3-15-62

Hewlett-Packard de Mexico.
S.A. de C.V.
Condominio Kadereyta
Circuito del Mezon No. 186 Desp. 6
Col. Del Prado - 76030
QRO, Mexico
Tel: 463-6-02-71

Hewlett-Packard de Mexico.
S.A. de C.V.
Monti Morelos No. 299
Fraccionamiento Loma Bonita 45060
GUADALAJARA, Jalisco
Tel: (52/36) 31 46 00
Telex: 0684 186 ECOMEX

Hewlett-Packard de Mexico.
S.A. de C.V.
Monte Pelvoux No. 111
Lomas de Chapultepec
11000 **MEXICO, D.F.**
Tel: (52/5) 596 79 33
Fax: (52/5) 596 42 08 (Ext 3231)

Hewlett-Packard de Mexico.
S.A. de C.V.
Czda. del Valle
409 Ote. 4th Piso
Colonia del Valle
Municipio de Garcia
66220 **NUOVO LEON**
Tel: 83-78-42-40
Telex: 382410 HPMY

Hewlett-Packard Co.
Latin America Region
Customer Support Center
7208 N.W. 31st St.
MIAMI, FL 33122
Tel: (305) 599-0465
Telex: 441603 HPMIAMI
Fax: 599-0277

Hewlett-Packard de Mexico.
S.A. de C.V.
Blvd. Independencia No. 2000 Ote.
Ote Zerpiso
Cm 1 Estrella
27010 **TORREON, COA.**
Tel: (52/171) 8 22 01

MOROCCO

Sicotel
Complexe des Habous
Tour C, avenue des Far
CASABLANCA 01
Tel: 31 22 70
Telex: 27604

R.T.I.
175, Rue Blomet
75015 **PARIS**
France
Tel: (1) 45 31 09 06
Tlx: 203376
Fax: (1) 45 31 09 18

Socofren Maroc
164, Boulevard D'Anfa
CASABLANCA
Tel: 36 08 84, 36 01 77
Telex: 23940

NETHERLANDS

Hewlett-Packard Nederland
Startbaan 16
1187 XR **AMSTELVEEN**
Tel: (31/20) 5476911
Telex: 13 216 HEPA NL
Fax: (31/20) 471825

Hewlett-Packard Nederland B.V.
Bongerd 2
NL 2900AA **CAPELLE A/D USSEL**
Tel: 31-20-51-6444
Telex: 21261 HEPAC NL

Hewlett-Packard Nederland B.V.
Pastoor Petersstraat 134-136
P.O. Box 2342
NL 5600 CH **EINDHOVEN**
Tel: 31-40-32-6911
Telex: 51484 hepae nl
Fax: (31/40) 446546

NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd.
5 Owens Road
P.O. Box 26-189
Epsom, **AUCKLAND**
Tel: (64/9) 605-651
Fax: (64/9) 600-507

Hewlett-Packard (N.Z.) Ltd.
186-190 Willis Street
P.O. Box 9443
WELLINGTON
Tel: (64/4) 820-400
Fax: (64/4) 843-380

NIGER

S.I.T.E.L.
Immeuble le General
Avenue General de Gaulle
PO Box 161
ABIDJAN 01
Ivory Coast
Tel: 32 12 27
Telex: 22149

NIGERIA

Management Information Systems Ltd.
3 Gerrard Road, Ikoyi
LAGOS
Tel: 68 08 87
Telex: 23582
Fax: 68 54 87

NORTHERN IRELAND

See United Kingdom

NORWAY

Hewlett-Packard Norway A/S
Osterdalen 16-18
P.O. Box 34
N-1345 **OSTERÅS**
Tel: (47/2) 24-6090
Telex: 76621 HPNAS N

Hewlett-Packard Norway A/S
Boemertg. 42
Box 2470
N-5037 **SOLHEIMSVIK**
Tel: (5/29) 10 72

OMAN

Suhail & Saud Bahwan
P.O. Box 169
MUSCAT/SULTANATE OF OMAN
Tel: 79 37 41

Telex: 3585 mb
Fax: 79 61 58

Intac LLC

P.O. Box 9196
MINA AL FAHAL/SULTANATE OF OMAN
Tel: 70-77-27, 70-77-23
Telex: 3865 Tawoos On

PAKISTAN

Mushko & Company Ltd.
House No. 16, Street No. 16
Sector F-6/3
ISLAMABAD
Tel: 824545
Telex: 54001 Muski Pk
Cable: FEMUS Islamabad

Mushko & Company Ltd.
Oosman Chambers
Abdullah Haroon Road
KARACHI 0302
Tel: 524131, 524132
Telex: 2894 MUSKO PK
Cable: COOPERATOR Karachi

PANAMA

Electronico Balboa, S.A.
Calle Samuel Lewis, Ed. Alfa
Apartado 4929
PANAMA CITY
Tel: 9-011-507-63613
Telex: 368 3483 ELECTRON PG

PERU

Cla Electro Médica S.A. (ERMED)
10s Flamencos 145, Ofc. 301/2
San Isidro
Casilla 1030
LIMA 1 Peru
Tel: 9-011-511-4-414325, 41-3705
Telex: 39425257 PE PB SIS

PHILIPPINES

The Online Advanced Systems Corp.
2nd Floor, Electra House
115-117 Esteban Street
P.O. Box 1510
Legaspi Village, Makati
Metro **MANILA**
Tel: 815-38-10 (up to 16)
Telex: 63274 ONLINE PN

PORTUGAL

Mundinter Intercambio
Mundial de Comercio
Avenida Antonio 2761
LISBON
Tel: 53 21 31, 53 21 37
Telex: 16691

CPC Instrumentacao
Torre de Santo Antonio
rue Gregorio Lopes, Lote
Restelo
1400 LISBON
Tel: 617343/44/45/46
Telex: 27432/26054
Fax: 617345

C.P.C.S.I.
Rua de Costa Cabral 575
4200 PORTO
Tel: 493122
Telex: 26054, 27432
Fax: 48 87 21

PUERTO RICO

Hewlett-Packard Puerto Rico
Box 4048
Aguadilla, PR 00605
Tel: (809) 891-5235

Hewlett-Packard Puerto Rico
101 Munoz Rivera Avenue
Esu. Calle Ochoa
HATO REY, 00918
Tel: (809) 754-7800

QATAR

Qatar Datamation Systems
P.O. Box 350
DOHA
Tel: 41 32 82
Tlx: 4833
Fax: 42 63 78

REUNION ISLAND

R.T.I.
175, Rue Blomet
75015 **PARIS**
France
Tel: (33/1) 45310906
Telex: 42/203376

RWANDA

R.T.I.
175, Rue Blomet
75015 **PARIS**
France
Tel: (33/1) 45310906
Telex: 42/203376
Fax: (1) 45 31 09 18

SAUDI ARABIA

Modern Electronics Establishment
P.O. Box 281
Thuobah
AL-KHOBAR 31952
Tel: 895-1760, 895-1764
Telex: 671 106 HPMEEK SJ
Cable: ELECTA AL-KHOBAR

Modern Electronics Establishment
P.O. Box 1228
Redec Plaza, 6th Floor
JEDDAH
Tel: 644 96 28

Telex: 4027 12 FARNAS SJ
Cable: ELECTA JEDDAH

Modern Electronics Establishment
P.O. Box 22015
RIYADH 11495
Tel: 4763030
Telex: 402040 MEERYD SJ

SCOTLAND

See United Kingdom

SENEGAL

25C
10, rue Tolbiac
B.P. 3716
DAKAR R.P.
(Please contact R.T.I. France.)
Tel: (221) 222248
Telex: 906/671

R.T.I.
175, Rue Blomet
75015 **PARIS**
France
Tel: 45310906
Telex: 203376
Fax: (1) 45 31 09 18

SINGAPORE

Hewlett-Packard Singapore Ltd.
1150 Depot Road
SINGAPORE, 0410
Tel: (65) 273 7388
Fax: (65) 278 8990

SOUTH AFRICA

Hi Performance Systems (Pty.) Ltd.
P.O. Box 120, Howard Place
CAPE TOWN 7450
Tel: (27/21) 53-7954
Fax: (27/21) 53-5119

Hi Performance Systems (Pty.) Ltd.
Private Bag Wendywood
SANDTON 2144
Tel: (27/11) 802-5111
Fax: (27/11) 802-6332

SPAIN

Hewlett-Packard Española, S.A.
Avda. Diagonal, 605
08028-**BARCELONA**
Tel: (34/3) 401 91 00
Telex: 52603 hpbee

Bilbao (Vizcaya) Sales
Hewlett-Packard Español, S.A.
Avda. Zugazarte, 8
48930 - Las Arenas - **VIZCAYA**

Hewlett-Packard Española, S.A.
Crt. N-VI, Km. 16, 500
Las Rozas
E-MADRID
Tel: (34/1) 6370011
Telex: 23515 HPE

Hewlett-Packard Española, S.A.
Avda. S. Francisco Javier, S/N
Planta 10. Edificio Sevilla 2
E-SEVILLA 5, SPAIN
Tel: (34/54/64) 4454
Telex: 72933

Hewlett-Packard Española, S.A.
Isabel La Catolica, 8
46004 **VALENCIA**
Tel: (34/6) 351 59 44
Telex: 63435
Fax: (34/6) 351 59 44

Hewlett-Packard Española, S.A.
Avda. de Zugazarte, 8
48930 - Las Arenas
VIZCAYA
Tel: (34/4) 464 32 55
Telex: 33032

SUDAN

Mediterranean Engineering &
Trading Co., Ltd.
P.O. Box 1025
KHARTOUM
Tel: (249) 41184
Telex: 24052

R.T.I.
175, Rue Blomet
75015 **PARIS**
France
Tel: (1) 45 31 09 06
Tlx: 203376
Fax: (1) 45 31 09 18

SWEDEN

Hewlett-Packard Sverige AB
Östra Tullgatan 3
20011 **MALMÖ**
Box 6132
Tel: (46/40) 702 70
Telex: (854) 17886 (via Spånga office)
Fax: (46/40) 97 74 18

Hewlett-Packard Sverige AB
Elementvagen 16
S-7022 **ÖREBRO**
Tel: (49/19) 10 48 80
Telex: (854) 17886 (via Spånga office)

Hewlett-Packard Sverige AB
Skalhögsgatan 9, Kista
P.O. Box 19
S-16493 **KISTA**
Tel: 46/8/750-200
Telex: (854) 17886
Telefax: (08) 7527781

Hewlett-Packard Sverige AB
Box 266
Topasgatan 1A
S-42123 **VÄSTRA-FRÖLUNDA**
(Gothenburg)
Tel: (031) 89 1000
Telex: (854) 17886 (via Spånga office)

SWITZERLAND

Hewlett-Packard (Schweiz) AG
Clarastrasse 12
CH-4058 **BASEL**
Tel: (41/61) 681 59 20
Fax: (41/61) 681 98 59

Hewlett-Packard (Schweiz) AG
7, rue du Bois-du-Lan
Case postale 365-1366
CH-1217 **MEYRIN 1**
Tel: (41/22) 7804111
Telex: 27333 HPAG CH

Hewlett-Packard (Schweiz) AG
Allmend
CH-8967 **WIDEN**
Tel: (41/57) 321 111
Telex: 53933 HPAG CH
Fax: (41/57) 321 475

SYRIA

Middle East Electronics
P.O. Box 2308
Abu Rumaneh
DAMASCUS
Tel: 33 45 92
Telex: 411 771 Meesy

TAIWAN

Hewlett-Packard Taiwan Ltd.
Taipei Office
8th Floor, Hewlett-Packard Building
337 Fu Hsing North Road
TAIPEI
Tel: (02) 712-0404
Telex: 24439 HEWPACK
Cable: HEWPACK Taipei

Hewlett-Packard Taiwan Ltd.
THM Office
2, Huan Nan Road
CHUNG LI, Taoyuan
Tel: (034) 929-666

SALES OFFICES

Arranged alphabetically by country (cont'd)

TAIWAN (Cont'd)

Hewlett-Packard Taiwan Ltd.
Taichung Office
5FL, 67, Sec. 3,
Wen-Hsin Road,
TAICHUNG
Tel: (04) 254-1201

Hewlett-Packard Taiwan Ltd.
Kaohsiung Office
11/F, 456, Chung Hsiao 1st Road
KAHSIUNG
Tel: (07) 2412318

TANZANIA

Adcom Ltd, Inc. Kenya
P.O. Box 30070
NAIROBI
Kenya
Tel: 33 19 55
Telex: 22639

THAILAND

Unimesa Co. Ltd.
2540 Sukumvit Avenue
Bangna
BANGKOK 10260
Tel: 662-398-6953
Telex: 84439 Simonco TH
Cable: UNIMESA Bangkok

TOGO

S.I.T.E.L.
Immeuble le General
Avenue General de Gaulle
P.O. Box 161
ABIDJAN 01
Ivory Coast
Tel: 32 12 27
Telex: 24149

Societe Africaine De Promotion
Immeuble Sagebe
Rue d'Atakpame
P.O. Box 4150
LOME
Tel: 21-62-88
Telex: 5357

TRINIDAD & TOBAGO

Caribbean Telecoms Ltd.
Corner McAllister Street &
Eastern Main Road, Laventille
P.O. Box 732
PORT-OF-SPAIN
Tel: 624-4213
Telex: 22561 CARTEL WG
Cable: CARTEL, PORT OF SPAIN

Computer and Controls Ltd.
P.O. Box 51
1 Taylor Street
PORT-OF-SPAIN
Tel: (809) 622-7719/622-7985
Telex: 38722798 COMCON WG
LOGO AGENCY 1264

TUNISIA

Precision Electronique
5, rue de Chypre
Mutuelleville
1002 **TUNIS BELVEDERE**
Tunisia
Tel: 78 50 37
Tlx: 13238

TURKEY

E.M.A.
Mediha Eldem Sokak No. 41/6
Yenisehir
ANKARA
Tel: 131 4695, 131 9175
Telex: 46912n emselr
Cable: EMATRADE ANKARA

Hewlett-Packard Bilgisayar Ve Olcum
Sistemleri A.S. (Headquarter)
Mesrutiyet Mah. 19 Mayıs Cad.
Nova-Baran Plaza Kat: 11-12
SISLI / ISTANBUL
Tel: 175 29 70
Telex: 39150
Fax: 175 29 92

Hewlett-Packard Bilgisayar Ve Olcum
Sistemleri A.S.
Paris Caddesi No 3
Diare 9
06670 **ANKARA**
Tel: 125 83 13
Telex: 46180
Fax: 125 47 45

UGANDA

Adcom Ltd, Inc. Kenya
P.O. Box 30070
NAIROBI
Kenya
Tel: 33 19 55
Telex: 22639

UNITED ARAB EMIRATES

Emilat Ltd.
P.O. Box 1641
SHARJAH
Tel: 591181
Telex: 48710 EMITAC EM
Cable: EMITAC SHARJAH

Emilat Ltd.
P.O. Box 2711
ABU DHABI
Tel: 820419-20
Cable: EMITACH ABUDHABI

Emilat Ltd.
P.O. Box 8391
DUBAI
Tel: 377591

Emilat Ltd.
P.O. Box 473
RAS AL KHAIMAH
Tel: 28133, 21270

UNITED KINGDOM

ENGLAND

Hewlett-Packard Ltd.
Customer Information Centre
King St. Lane
Winners, Wokingham
GB-BERKSHIRE RG11 5AR
Tel: (44/734) 784774
Telex: 847178
Fax: 777285

Hewlett-Packard Ltd.
Miller House
The Ring, **BRACKNELL**
Berkshire RG12 1XN
Tel: (44/344) 424-898
Fax: (44/344) 860015, Ext 56023

Hewlett-Packard Ltd.
Customer Sales & Support
Building 1, Filton Road
Stoke Gifford
BRISTOL BS12 6QZ
Tel: (44/272) 236000

Hewlett-Packard Ltd.
Oakfield House, Oakfield Grove
Clifton **BRISTOL**, Avon BS8 2BN
Tel: 44-272-736 806
Telex: 444302

Hewlett-Packard Ltd.
9 Bridewell Place
LONDON EC4V 6BS
Tel: (44/583) 6565
Fax: (44/583) 6565, Ext 4713

Hewlett-Packard Ltd.
Heathside Park Rd.
Cheadle Heath, Stockport
GB-MANCHESTER SK3 0RB
Tel: (44/61) 428-0828
Telex: 669068
Fax: 4955009

Hewlett-Packard Ltd.
Harman House
No. 1 George St.
Uxbridge,
GB-MIDDLESEX UB8 1YH
Tel: (44/895) 72020
Telex: 893135
Fax: 73684

Hewlett-Packard Ltd.
Pontefract Road
NORMANTON,
West Yorkshire WF6 1RN
Tel: (44/924) 895-566
Fax: (44/924) 896-691
Telex: 557355

Hewlett-Packard Ltd.
The Quadrangle
106-118 Station Road
REDHILL, Surrey RH1 1PS
Tel: 44-737-686-55
Telex: 947234

Hewlett-Packard Ltd.
Avon House
435 Stratford Road
Shirley, **SOLIHULL**, West Midlands
B90 4BL
Tel: 44-21-745-8800
Telex: 339105

Hewlett-Packard Ltd.
Heathside Park Road
Cheadle Heath, Stockport
Cheshire SK3 0RB
Tel: (44/61) 428-0828
Fax: (44/61) 495-5009
Telex: 668068

Hewlett-Packard Ltd.
Harman House
No. 1 George Street
UXBRIDGE, Middlesex UB8 1YH
Tel: (44/895) 72020
Fax: (44/895) 73684

Hewlett-Packard Ltd.
King Street Lane
Winners, **WOKINGHAM**
Berkshire RG11 5AR
Tel: (44/734) 784774
Fax: (44/734) 777285 Ext 52285

NORTHERN IRELAND

Hewlett-Packard (Ireland) Ltd.
Carrickfergus Industrial Centre
75 Belfast Road, Carrickfergus
CO. ANTRIM BT38 8PM
Tel: 09603 67333

Unit 5
Bridgewood House
Newforge Lane
Malone Road
BELFAST BT95 NW
Tel: (353/232) 664-851
Fax: (353/232) 665-619

SCOTLAND

Hewlett-Packard Ltd.
1/3 Springburn Place
College Milton North
EAST KILBRIDE, G74 5NU
Tel: 035-52-49261
Fax: 03552-35929
Telex: 779615

Hewlett-Packard Ltd.
SOUTH QUEENSFERRY
West Lothian, EH30 9TG
Tel: 031-331-1188
Fax: 031-331-7412

UNITED STATES

Hewlett-Packard Co.
Customer Information Center
Tel: (800) 752-0900
Hours: 6:00 AM to 5:00 PM
Pacific Time

Alabama

Hewlett-Packard Co.
2100 Riverchase Center
Building 100 - Suite 118
BIRMINGHAM, AL 35244
Tel: (205) 988-0547
Fax: (205) 988-5308

Hewlett-Packard Co.
620 Discovery Dr.
HUNTSVILLE, AL 35806
Tel: (205) 830-2000
Fax: (205) 830-1427

Alaska

Hewlett-Packard Co.
4000 Old Seward Highway
Suite 101
ANCHORAGE, AK 99503
Tel: (907) 563-8855
Fax: (907) 561-7409

Arizona

Hewlett-Packard Co.
8080 Pointe Parkway West
PHOENIX, AZ 85044
Tel: (602) 273-8000
Fax: (602) 273-8080

Hewlett-Packard Co.
3400 East Britannia Dr.
Bldg. C, Suite 124
TUCSON, AZ 85706
Tel: (602) 573-7400
Fax: (602) 573-7429

Arkansas

Hewlett-Packard Co.
10816 Executive Center Dr
Conway Bldg, Suite 116
LITTLE ROCK, AR 72211
Tel: (501) 225-7178
Fax: (501) 221-3614

California

Hewlett-Packard Co.
26701 W. Argoura Rd
CALABASAS, CA 91302
Tel: (818) 880-3400
Fax: (818) 880-3437

Hewlett-Packard Co.
353 Lakeside Dr
FOSTER CITY, CA 94404
Tel: (415) 378-8400
Fax: (415) 378-8405

Hewlett-Packard Co.
1907 North Gateway Blvd.
FRESNO, CA 93727
Tel: (209) 252-9652
Fax: (209) 456-9302

Hewlett-Packard Co.
1421 S. Manhattan Av.
FULLERTON, CA 92631
Tel: (714) 999-6700
Fax: (714) 778-3033

Hewlett-Packard Co.
7408 Hollister Ave. #A
GOLETA, CA 93117
Tel: (805) 685-6100
Fax: (805) 685-6163

Hewlett-Packard Co.
9800 Muirlands Ave.
IRVINE, CA 92718
Tel: (714) 472-3000
Fax: (714) 581-3607 (Direct Dial only)

Hewlett-Packard Co.
2525 Grand Avenue
LONG BEACH, CA 90815
Tel: (213) 498-1111
Fax: (213) 494-1986

Hewlett-Packard Co.
5651 West Manchester Ave.
LOS ANGELES, CA 90045
Tel: (213) 337-8000
Fax: (213) 337-8338

Hewlett-Packard Co.
321 E. Evelyn Ave.
Bldg. 330
MOUNTAIN VIEW, CA 94039
Tel: (415) 694-2000
Fax: (415) 694-0600

Hewlett-Packard Co.
5161 Lankershim Blvd.
NORTH HOLLYWOOD, CA 91601
Tel: (818) 505-5600
Fax: (818) 505-5875

Hewlett-Packard Co.
5725 W. Las Positas Blvd.
PLEASANTON, CA 94566
Tel: (415) 460-0282
Fax: (415) 460-0713

Hewlett-Packard Co.
4244 So. Market Court, Suite A
SACRAMENTO, CA 95834
Tel: (916) 929-7222
Fax: (916) 927-7152

Hewlett-Packard Co.
9606 Aero Drive
SAN DIEGO, CA 92123
Tel: (619) 279-3200
Fax: (619) 268-8487

Hewlett-Packard Co.
50 Fremont St. Suite 200
SAN FRANCISCO, CA 94105
Tel: (415) 882-6800
Fax: (415) 882-6805

Hewlett-Packard Co.
3003 Scott Boulevard
SANTA CLARA, CA 95054
Tel: (408) 988-7000
Fax: (408) 988-7103

Hewlett-Packard Co.
5280 Valentine Rd. Suite 205
VENTURA, CA 93003
Tel: (805) 658-6898
Fax: (805) 650-0721

Colorado

Hewlett-Packard Co.
2945 Center Green Court South
Suite A
BOULDER, CO 80301
Tel: (303) 938-3065
Fax: (303) 938-3025

Hewlett-Packard Co.
24 Inverness Place, East
ENGLEWOOD, CO 80112
Tel: (303) 649-5000
Fax: (303) 649-5787

Connecticut

Hewlett-Packard Co.
3 Parkland Dr.
DARIEN, CT 06820
Tel: (203) 656-0040
Fax: (203) 656-5563

Hewlett-Packard Co.
115 Glastonbury Blvd
GLASTONBURY, CT 06033
Tel: (203) 633-8100
Fax: (203) 659-6087

Florida

Hewlett-Packard Co.
5900 N. Andrews, Suite 100
FORT LAUDERDALE, FL 33309
Tel: (305) 938-9800
Fax: (305) 938-2293

Hewlett-Packard Co.
6800 South Point Parkway
Suite 301
JACKSONVILLE, FL 32216
Tel: (904) 636-9955
Fax: (904) 636-9955

Hewlett-Packard Co.
255 East Drive, Suite B
MELBOURNE, FL 32901
Tel: (407) 729-0704
Fax: (407) 723-4557

Hewlett-Packard Co.
6177 Lake Ellenor Drive
ORLANDO, FL 32809
Tel: (407) 859-2900
Fax: (407) 826-9309

Hewlett-Packard Co.
4700 Bayou Blvd.
Building 5
PENSACOLA, FL 32503
Tel: (904) 476-8422
Fax: (904) 476-4116

Hewlett-Packard Co.
5550 Idlewild, #150
TAMPA, FL 33634
Tel: (813) 884-3282
Fax: (813) 889-4445

Georgia

Hewlett-Packard Co.
2015 South Park Place
ATLANTA, GA 30339
Tel: (404) 955-1500
Fax: (404) 980-7669

Hewlett-Packard Co.
3607 Parkway Lane
Suite 300
NORCROSS, GA 30092
Tel: (404) 448-1894
Fax: (404) 246-5206

Hawaii

Hewlett-Packard Co.
Pacific Tower
1001 Bishop St.
Suite 2400
HONOLULU, HI 96813
Tel: (808) 526-1555
Fax: (808) 536-7873

Idaho

Hewlett-Packard Co.
11309 Chinden Blvd.
BOISE, ID 83714
Tel: (208) 323-2700
Fax: (208) 323-2528

Illinois

Hewlett-Packard Co.
2205 E. Empire St.
BLOOMINGTON, IL 61704
Tel: (309) 662-9411
Fax: (309) 662-0351

Hewlett-Packard Co.
525 W. Monroe St., Suite 1308
CHICAGO, IL 60606
Tel: (312) 930-0010
Fax: (312) 930-0986

Hewlett-Packard Co.
1200 East Diehl Road
NAPERVILLE, IL 60566
Tel: (312) 357-8800
Fax: (312) 357-9896

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800
Fax: (312) 259-5878

Indiana

Hewlett-Packard Co.
1911 N. Meridian St.
CARMEL, IN 46032
Tel: (317) 844-4100
Fax: (317) 843-1291

Hewlett-Packard Co.
111 E. Ludwig Road
Suite 108
FT. WAYNE, IN 46825
Tel: (219) 482-4283
Fax: (219) 482-9907

Iowa

Hewlett-Packard Co.
4050 River Center Court
CEDAR RAPIDS, IA 52402
Tel: (319) 393-0606
Fax: (319) 378-1024

Hewlett-Packard Co.
4201 Corporate Dr.
WEST DES MOINES, IA 50265
Tel: (515) 224-1435
Fax: (515) 224-1870

Kansas

Hewlett-Packard Co.
North Rock Business Park
3450 N. Rock Rd.
Suite 300
WICHITA, KS 67226
Tel: (316) 636-4040
Fax: (316) 636-4504

Kentucky

Hewlett-Packard Co.
305 N. Hurstbourne Lane,
Suite 100
LOUISVILLE, KY 40222
Tel: (502) 426-0100
Fax: (502) 426-0322

Louisiana

Hewlett-Packard Co.
160 James Drive East
ST. ROSE, LA 70087
Tel: (504) 467-4100
Fax: (504) 467-4100 x 291

Maryland

Hewlett-Packard Co.
3701 Koppers Street
BALTIMORE, MD 21227
Tel: (301) 644-5800
Fax: (301) 362-7650

Hewlett-Packard Co.
2 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 948-6370
Fax: (301) 948-5986

Massachusetts

Hewlett-Packard Co.
1775 Minuteman Road
ANDOVER, MA 01810
Tel: (508) 682-1500
Fax: (508) 794-2619

Hewlett-Packard Co.
29 Burlington Mall Rd.
BURLINGTON, MA 01803-4514
Tel: (617) 270-7000
Fax: (617) 221-5240

Michigan

Hewlett-Packard Co.
3033 Orchard Vista S.E.
GRAND RAPIDS, MI 49546
Tel: (616) 957-1970
Fax: (616) 956-9022

Hewlett-Packard Co.
39550 Orchard Hill Place Drive
NOVI, MI 48050
Tel: (313) 349-9200
Fax: (313) 349-9240

Hewlett-Packard Co.
560 Kirts Rd.
Suite 101
TROY, MI 48064
Tel: (313) 362-5180
Fax: (313) 362-3028

Minnesota

Hewlett-Packard Co.
2025 W. Larpenteur Ave.
ST. PAUL, MN 55113
Tel: (612) 644-1100
Fax: (612) 641-9787

Mississippi

Hewlett-Packard Co.
800 Woodland Parkway, Suite 101
RIDGELAND, MS 39157
Tel: (601) 957-0730
Fax: (601) 957-2515

Missouri

Hewlett-Packard Co.
13001 Hollenberg Drive
BRIDGETON, MO 63044
Tel: (314) 344-5100
Fax: (314) 344-5273

Hewlett-Packard Co.
6601 Winchester Ave.
KANSAS CITY, MO 64133
Tel: (816) 737-0071
Fax: (816) 737-4690

Montana

Hewlett-Packard Co.
13001 Hollenberg Drive
BRIDGETON, MT 63044
Tel: (314) 344-5100
Fax: (314) 344-5273

Nebraska

Hewlett-Packard
11626 Nicholas St.
OMAHA, NE 68154
Tel: (402) 493-0300
Fax: (402) 493-4334

New Jersey

Hewlett-Packard Co.
120 W. Century Road
PARAMUS, NJ 07653
Tel: (201) 599-5000
Fax: (201) 599-5382

Hewlett-Packard Co.
10 Sylvan Way
PARSIPPANY, NJ 07054
Tel: (201) 682-4000
Fax: (201) 682-4031

Hewlett-Packard Co.
20 New England Av.
PISCATAWAY, NJ 08854
Tel: (201) 562-6100
Fax: (201) 562-6246

New Mexico

Hewlett-Packard Co.
7801 Jefferson N.E.
ALBUQUERQUE, NM 87109
Tel: (505) 823-6100
Fax: (505) 823-1243

Hewlett-Packard Co.
1362-C Trinity Dr.
LOS ALAMOS, NM 87544
Tel: (505) 662-6700
Fax: (505) 662-4312

New York

Hewlett-Packard Co.
5 Computer Drive South
ALBANY, NY 12205
Tel: (518) 458-1550
Fax: (518) 458-1550 x 0393

Hewlett-Packard Co.
130 John Muir Dr.
AMHERST, NY 14228
Tel: (716) 689-3003
Fax: (716) 636-7034

Hewlett-Packard Co.
200 Cross Keys Office Park
FAIRPORT, NY 14450
Tel: (716) 223-9950
Fax: (716) 223-6331

Hewlett-Packard Co.
7641 Henry Clay Blvd.
LIVERPOOL, NY 13088
Tel: (315) 451-1820
Fax: (315) 451-1820 x 255

Hewlett-Packard Co.
No. 1 Pennsylvania Plaza
55th Floor
34th Street & 7th Avenue
MANHATTAN NY 10119
Tel: (212) 971-0800
Fax: (212) 330-6967

Hewlett-Packard Co.
2975 Westchester Ave
PURCHASE, NY 10577
Tel: (914) 935-6300
Fax: (914) 935-6497

Hewlett-Packard Co.
Executive Square Office Bldg.
66 Middlebush Rd.
WAPPINGERS FALLS, NY 12590
Tel: (914) 298-9125
Fax: (914) 298-9154

Hewlett-Packard Co.
3 Crossways Park West
WOODBURY, NY 11797
Tel: (516) 682-7800
Fax: (516) 682-7806 (2)

North Carolina

Hewlett-Packard Co.
305 Gregson Dr.
CARY, NC 27511
Tel: (919) 467-6600
Fax: (919) 460-2296
(919) 460-2297

Hewlett-Packard Co.
P.O. Box 240318
CHARLOTTE, NC 28224
Tel: (704) 527-8780
Fax: (704) 523-7857

Hewlett-Packard Co.
7029 Albert Pick Rd. #100
GREENSBORO, NC 27409
Tel: (919) 665-1800
Fax: (919) 668-1797
Mailing Address
PO Box 26500
Greensboro, NC 27426

Ohio

Hewlett-Packard Co.
2717 S. Arlington Rd.
AKRON 44312
Tel: (216) 644-2270
Fax: (216) 644-7415

Hewlett-Packard Co.
4501 Erskine Road
CINCINNATI, OH 45242
Tel: (513) 891-9870
Fax: (513) 891-0033

SALES OFFICES

Arranged alphabetically by country (cont'd)

UNITED STATES (Cont'd)

Hewlett-Packard Co.
Moutroffe West Ave.
COPLEY, OH 44321
Tel: (216) 666-7711
Fax: (216) 666-8054

Hewlett-Packard Co.
7887 Washington Village Dr.
DAYTON, OH 45459
Tel: (513) 433-2223
Fax: (513) 433-8633

Hewlett-Packard Co.
9080 Springboro Pike
MAKESBURG 45342
Tel: (513) 433-2223
Fax: (513) 433-3633

Hewlett-Packard Co.
15885 Sprague Road
STRONGSVILLE, OH 44136
Tel: (216) 243-7300
Fax: (216) 234-7230

Hewlett-Packard Co.
One Maritime Plaza, 5th Floor
720 Water Street
TOLEDO, OH 43604
Tel: (419) 242-2200
Fax: (419) 241-7655

Hewlett-Packard Co.
675 Brooksedge Blvd.
WESTERVILLE, OH 43081
Tel: (614) 891-3344
Fax: (614) 891-1476

Oklahoma

Hewlett-Packard Co.
3525 N.W. 56th St.
Suite C-100
OKLAHOMA CITY, OK 73112
Tel: (405) 946-9499
Fax: (405) 942-2127

Hewlett-Packard Co.
6655 South Lewis,
Suite 105
TULSA, OK 74136
Tel: (918) 481-6700
Fax: (918) 481-2250

Oregon

Hewlett-Packard Co.
9255 S. W. Pioneer Court
WILSONVILLE, OR 97070
Tel: (503) 682-8000
Fax: (503) 682-8155

Pennsylvania

Hewlett-Packard Co.
Heatherwood Industrial Park
50 Dorchester Rd.
P.O. Box 6080
HARRISBURG, PA 17112
Tel: (717) 657-5900
Fax: (717) 657-5946

Hewlett-Packard Co.
111 Zeta Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400
Fax: (412) 963-1300

Hewlett-Packard Co.
2750 Monroe Boulevard
VALLEY FORGE, PA 19482
Tel: (215) 666-9000
Fax: (215) 666-2034

South Carolina

Hewlett-Packard Co.
Brookside Park, Suite 122
1 Harbison Way
COLUMBIA, SC 29212
Tel: (803) 732-0400
Fax: (803) 732-4567

Hewlett-Packard Co.
545 N. Pleasantburg Dr.
Suite 100
GREENVILLE, SC 29607
Tel: (803) 232-8002
Fax: (803) 232-8739

Tennessee

Hewlett-Packard Co.
One Energy Center Suite 200
Pelissippi Pkwy.
KNOXVILLE, TN 37932
Tel: (615) 966-4747
Fax: (615) 966-8147

Hewlett-Packard Co.
889 Ridge Lake Blvd.,
Suite 100
MEMPHIS, TN 38119
Tel: (901) 763-4747
Fax: (901) 762-9723

Hewlett-Packard Co.
44 Vantage Way,
Suite 160
NASHVILLE, TN 37228
Tel: (615) 255-1271
Fax: (615) 726-2310

Texas

Hewlett-Packard Co.
9050 Capital of Texas Highway, North
#290
AUSTIN, TX 78759
Tel: (512) 346-3855
Fax: (512) 338-7201
Mailing Address
PO Box 9431
Austin, TX 78766-9430

Hewlett-Packard Co.
5700 Cromo Dr
EL PASO, TX 79912
Tel: (915) 833-4400
Fax: (915) 581-8097

Hewlett-Packard Co.
10535 Harwin Drive
HOUSTON, TX 77036
Tel: (713) 776-6400
Fax: (713) 776-6495

Hewlett-Packard Co.
3301 West Royal Lane
IRVING, TX 75063
Tel: (214) 869-3377
Fax: (214) 830-8951

Hewlett-Packard Co.
109 E. Toronto, Suite 100
MCALLEN, TX 78503
Tel: (512) 630-3030
Fax: (512) 630-1355

Hewlett-Packard Co.
930 E. Campbell Rd.
RICHARDSON, TX 75081
Tel: (214) 231-6101
Fax: (214) 699-4337

Hewlett-Packard Co.
14100 San Pedro Ave., Suite 100
SAN ANTONIO, TX 78232
Tel: (512) 494-9336
Fax: (512) 491-1299

Utah

Hewlett-Packard Co.
3530 W. 2100 South
SALT LAKE CITY, UT 84119
Tel: (801) 974-1700
Fax: (801) 974-1780

Virginia

Hewlett-Packard Co.
840 Greenbrier Circle
Suite 101
CHESAPEAKE, VA 23320
Tel: (804) 424-7105
Fax: (804) 424-1494

Hewlett-Packard Co.
4401 Water Front Dr.
GLEN ALLEN, VA 23060
Tel: (804) 747-7750
Fax: (804) 965-9297

Hewlett-Packard Co.
2800 Electric Road Suite 100
ROANOKE, VA 24018
Tel: (703) 774-3444
Fax: (703) 989-8049

Washington

Hewlett-Packard Co.
15815 S.E. 37th Street
BELLEVUE, WA 98006
Tel: (206) 643-4000
Fax: (206) 643-8748

Hewlett-Packard Co.
N. 1225 Argonne Rd
SPOKANE, WA 99212-2657
Tel: (509) 922-7000
Fax: (509) 927-4236

West Virginia

Hewlett-Packard Co.
501 56th Street
CHARLESTON, WV 25304
Tel: (304) 925-0492
Fax: (304) 925-1910

Wisconsin

Hewlett-Packard Co.
275 N. Corporate Dr.
BROOKFIELD, WI 53005
Tel: (414) 792-8800
Fax: (414) 792-0218

URUGUAY

Pablo Ferrando S.A.C. e l.
Avenida Italia 2877
Casilla de Correo 370
MONTEVIDEO
Tel: 59-82-802-586
Telex: 398802586

Olympia de Uruguay S.A.
Maquinas de Oficina
Avda. del Libertador 1997
Casilla de Correos 6644
MONTEVIDEO
Tel: 91-1809, 98-3807
Telex: 6342 OROU UY

VENEZUELA

Analytical Supplies, CA
Quinta #103 Impermes
Av El Centro
Los Chorrros
Apartado 75472
CARACAS
Tel: 364904, 2394047
Telex: 26274 CABIC

Hewlett-Packard de Venezuela C.A.
Residencias Tia Betty Local 1
Avenida 3 Y con Calle 75
MARACAIBO, Estado Zulia
Apartado 2646
Tel: 586175669
Telex: 62464 HPMAR

YUGOSLAVIA

Do Hermes
General Zdanova 4
YU-11000 BEOGRAD
Tel: (011) 342 641
Telex: 11433

Do Hermes
Celovska 73
YU-61000 LJUBLJANA
Tel: (061) 553 170
Telex: 31583

ZAIRE

C.I.E.
Computer & Industrial Engineering
25 Ave. de la Justice Gomme
Boite Postale 10976
KINSHASA
Tel: 32 063, 32 633, 28 251
Telex: 21552
Fax: 22 850

ZAMBIA

R.J. Tilbury (Zambia) Ltd.
P.O. Box 32792
LUSAKA
Tel: 21 55 80
Telex: 40128

ZIMBABWE

Field Consolidated (Private) Ltd.
Syston Division
Manhattan Court
61 Second Street
P.O. Box 3458
HARARE
Tel: 73 98 81
Telex: 26241
Fax: 70 20 08

Please send directory corrections to:

Test & Measurement Catalog
Hewlett-Packard Company
3200 Hillview Avenue
Palo Alto, CA 94304
Tel: (415) 857-4706
Fax: (415) 857-3880

September 1989

